



MAINTENANCE CHART



MAINTENANCE SCHEDULE

ITEMS	SERVICE	1 st	2 nd	3 rd	4 rd	5 rd	6 rd
	DAYS	1 st 60	Next 180	Next 180	Next 180	Next 180	Next 180
	KM Note- 1	500-750	6000-6500	12000-12500	18000-18500	24000-24500	30000-30500
↘ Fuel Line		I	I	I	I	I	I
↘ Throttle Operation		I, A	I, A	I, A	I, A	I, A	I, A
↘ Air Cleaner Element	Note-2	C	C	R	C	R	C
↘ Spark Plug	Note-3	I, C, A	I, C, A	R	I, C, A	R	I, C, A
✗ Valve Clearance	Note-4	I, A		I, A		I, A	
✗ Engine Oil	Note-5	R	I, T	R	I, T	R	I, T
✗ Engine Oil Filter		R		R		R	
✗ Radiator and Hoses		I	I	I	I	I	I
Electric Starter			I	I	I	I	I
Oil Pressure Indicator		I	I	I	I	I	I
✗ Drive Chain		I, C, L, A at every 1000 km			I, C, L, A at every 1000 km		
Drive Chain Slider	Note-6		I	I	I	I	I
Battery Voltage		I	I	I	I	I	I
Brake Pad Wear		I	I	I	I	I	I
↘ Brake System & Brake Pedal			C, L	C, L	C, L	C, L	C, L
Brake Fluid	Note-7		I	I	I	I	R
↘ Stop Lamp Switch		I	I	I	I	I	I
↘ Headlamp Focus		I	I	I	I	I	I
Clutch Lever Free Play		I, A	I, A	I, A	I, A	I, A	I, A
Side Stand		L	L	L	L	L	L
Main Stand (Optional)		L	L	L	L	L	L
Side Stand Switch		I	I	I	I	I	I
↘ Nut, Bolts, Fasteners & Grommets	Note-8	I	I	I	I	I	I
✗ Wheels Bearings & Flange Bearing	Note-9	I	I	I	I	I	I
✗ Wheel/Tyres	Note-10	I	I	I	I	I	I
✗ Steering Head Bearing		I, A	I, A	I, L, A	I, A	I, L, A	I, A
✗ Front Suspension/Oil	Note-11	I	I	I	I	I	R
↘ Rear Suspension	Note-12	I	I	I	I	I	I
✗ Muffler (Catalytic Converter)	Note-13		I, E	I, E	I, E	I, E	I, E
↘ Evaporative Emission Control System	Note-14	I	I	I	I	I	I
Rear Wheel Damper		I	I	I	I	I	I
Radiator Coolant	Note-15	Replacement every 2 year or 24000 km, whichever is earlier					
Cooling System		I	I	I	I	I	I
Fuel Filter (External)				R		R	
Radiator Fins and Heat Shield		I	I	I	I	I	I

↘ To be serviced by your Authorised Distributor/Dealer unless the owner has the relevant tools, technical information and is technically qualified.

✗ In the interest of safety, we recommend that these jobs are carried out only by your Authorised Distributor/Dealer.

Note-1: At higher odometer readings, repeat the frequency interval established here. **Note-2:** Service more frequently if the vehicle is ridden in unusually wet or dusty areas. **Note-3:** Inspect, adjust the spark plug and replace in every 12000 km.

Note-4: Inspect and adjust in every 12000 km. **Note-5:** Replace engine oil at 1st service and in every 12000 km. Top up if the oil level is at or near the lower level mark. **Note-6:** Visit Authorised Distributor/Dealer for inspection, cleaning, lubrication and adjustment of drive chain at every 1000 km. **Note-7:** Replace brake fluid once in every two years or 30000 km, whichever is earlier. **Note-8:** Inspect & maintain specified torque. **Note-9:** Inspect the wheel bearings free play, replace if necessary.

Note-10: Inspect, replace if necessary/damaged. Replace the tyre as per tread wear indicator (TWI). **Note-11:** Replace front fork oil once in a every 2 years or 30000 km, whichever is earlier. **Note-12:** Inspect rear suspension mounting bushes play, replace rear shock absorber if necessary. **Note-13:** Check CO emission at idle. **Note-14:** Inspect the canister hoses for deterioration, damage or loose connections and canister for cracks or other damages. **Note-15:** Replace the radiator coolant in every 2 year or 24000 km, whichever is earlier. Inspect and top up Hero pre-mix coolant if required (50:50 ratio).

Note

• Service more frequently if the vehicle is ridden in wet or dusty areas.

• Service more frequently if the vehicle is ridden in rain or at full throttle.

• Always replace gaskets, O-rings, circlips and cotter pins with new one once removed.

• Always wipe the water from the vehicle after washing. Use clean soft cloth or pressurized air for completely drying the water.

Ensure that each paid service is availed within 180 days or 6000 km from the date of previous service, whichever is earlier.

I: INSPECT C: CLEAN R: REPLACE A: ADJUST IF REQUIRED L: LUBRICATE T: TOP UP E: EMISSION CHECK