

MAINTENANCE SCHEDULE

I: INSPECT C: CLEAN R: REPLACE A: ADJUST L: LUBRICATE T: TOP UP

The following Maintenance Schedule specifies all maintenance required to keep your vehicle in peak operating condition. Maintenance work should be performed in accordance with standards and specifications of HMCL Niloy Bangladesh Ltd. by properly trained and equipped technicians. Your Authorised Distributor/Dealer meets all of these requirements.

- ↘ To be serviced by your Authorised Distributor/Dealer unless the owner has the relevant tools, technical information and is technically qualified.
- ✕ In the interest of safety, we recommend that these jobs are carried out only by your Authorised Distributor/Dealer.

Note-1: At higher odometer readings, repeat the frequency interval established here.

Note-2: Should be serviced by a "Skilled Technician" of your Authorised Distributor/Dealer.

Note-3: Clean carburetor if required after inspection during service.

Note-4: Service more frequently if the vehicle is ridden in unusually wet or dusty areas.

Note-5: Service more frequently when riding in rain or at full throttle.

Note-6: Replace engine oil once in every 6000 km. Top up if the oil level is at or near the lower level mark.

Note-7: Replace drive belt once in every 24000 km.

Note-8: Replace once in a year. Replacement requires mechanical skill.

Note-9: In the interest of safety, we recommend these items to be serviced only by your Authorised Distributor/Dealer.






Note: Always wipe the water from the vehicle after washing. Use clean soft cloth or pressurized air for completely drying the water.

MAINTENANCE SCHEDULE

Dear Customer,

We would strongly recommend the following schedule, to keep your vehicle in perfect running condition and healthy environment. vehicle subjected to severe use or ridden in dusty area will require more frequent servicing.

ITEMS	SERVICE	1 st	2 nd	3 rd	4 th	5 th	6 th	7 th	8 th	9 th	10 th	11 th
	DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
	KMS. Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500
Fuel Line		I	I	I	I	I	I	I	I	I	I	I
Throttle Operation	Note-2	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A
Carburetor	Note-3	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A
Air Cleaner	Note-4	C	C	C	C	R	C	C	C	R	C	C
Drain Tube	Note-5	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C
Spark Plug		I,C,A	I,C,A	I,C,A	I,C,A	R	I,C,A	I,C,A	I,C,A	R	I,C,A	I,C,A
Valve Clearance	Note-2	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A	I,A
Engine Oil	Note-6	R	T	R	T	R	T	R	T	R	T	R
Engine Oil Strainer Screen	Note-2	C		C		C		C		C		C
Belt Case/Kick Starter Driven Gear	Note-2	C,L	C,L	C,L	C,L	C,L	C,L	C,L	C,L	C,L	C,L	C,L
Drive Belt	Note-2 & 7			I		I		I		I		I
Final Drive Oil	Note-2 & 8				R			Replace once in every 10000 kms.				
Battery Voltage		I	I	I	I	I	I	I	I	I	I	I
Brake Shoe Wear		I	I	I	I	I	I	I	I	I	I	I
Pivot Arm		L	L	L	L	L	L	L	L	L	L	L

ITEMS	SERVICE	1 st	2 nd	3 rd	4 th	5 th	6 th	7 th	8 th	9 th	10 th	11 th
	DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
	KMS. Note- 1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500
 Brake System			L	L	L	L	L	L	L	L	L	L
 Stop Lamp Switch		I	I	I	I	I	I	I	I	I	I	I
 Headlamp Focus		I	I	I	I	I	I	I	I	I	I	I
Clutch Shoe Wear	Note-9			I		I		I		I		I
Suspension		I	I	I	I	I	I	I	I	I	I	I
Main Stand/Side Stand		L	L	L	L	L	L	L	L	L	L	L
Side Stand Switch		I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C	I,C
Fasteners	Note-2	I	I	I	I	I	I	I	I	I	I	I
 Wheels/Tyres	Note-9	I	I	I	I	I	I	I	I	I	I	I
 Steering Head Bearing	Note-9	I,A	I,A	I,A	I,A	I,L,A	I,A	I,A	I,A	I,L,A	I,A	I,A