PREFACE

No : IB11C

Thank you for selecting a HMCL Niloy Bangladesh Ltd. **IGNITOR FV XTEC**. We wish you many miles of continued riding pleasure in the years ahead.

We at HMCL Niloy Bangladesh Ltd., are committed to demonstrate excellence in our environment performance on a continual basis, as an intrinsic element of our corporate philosophy. To achieve this we commit ourselves to continue product innovations to improve environment compatibility, comply with all applicable legislation including environment legislation and strengthen the green supply chain.

This booklet is your guide to the basic operation and maintenance of your new HMCL Niloy Bangladesh Ltd. **IGNITOR FV XTEC**. Please take time to read it carefully. As with any fine machine, proper care and maintenance are essential for trouble-free operation and optimum performance.

Authorised Distributor or the authorised dealer(s) of the Distributor **("Dealer")** will be glad to provide further information or assistance and to handle your future service needs.

Let us make this world a safer, healthier and more environment friendly place.

NOTE

ALL INFORMATION, ILLUSTRATION, PHOTOGRAPH, DIRECTIONS, SPECIFICATIONS AND OTHER CONTENTS COVERED IN THIS OWNER'S MANUAL ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF ITS PRINTING APPROVAL, AND THE ACCURACY OR CORRECTNESS OF THE SAME IS NOT UNDERTAKEN OR GUARANTEED.

HMCL Niloy Bangladesh Ltd. ***RESERVES THE RIGHT TO MAKE CHANGES IN ITS CONTENTS AT ANY TIME WITHOUT NOTICE AND/OR INCURRING ANY OBLIGATION, WHATSOEVER. NO ONE IS ALLOWED TO REPRODUCE ANY PART OF THIS PUBLICATION WITHOUT OBTAINING PRIOR WRITTEN PERMISSION FROM*** HMCL Niloy Bangladesh Ltd.

CONTENTS


	Pg. No.		Pg. No.
VEHICLE IDENTIFICATION	1	SPARK PLUG INSPECTION	42
VEHICLE VIEWS	2	ENGINE OIL	43
VEHICLE SPECIFICATION	5	ENGINE OIL FILTER ELEMENT	44
ACCESSORIES & MODIFICATIONS	7	OIL FILTER SCREEN	45
ANTI-THEFT TIPS	7	AIR CLEANER	46
VEHICLE SAFETY	8	CARBURETOR (IDLE SPEED ADJUSTMENT)	48
• Important safety information	8	VALVE CLEARANCE ADJUSTMENT	49
• Protective apparel	9	CLUTCH LEVER FREE PLAY	51
SAFE RIDING TIPS	10	THROTTLE OPERATION	52
TIPS FOR HEALTHY ENVIRONMENT	11	BYSTARTER OPERATION	52
PARTS FUNCTION	12	DRIVE CHAIN SLACKNESS	53
• Ignition switch	12	DRIVE CHAIN SLIDER INSPECTION	55
• Instruments and Indicators	13	BRAKES	55
• LCD Panel	15	SUSPENSION	59
FEATURES	19	WHEEL	59
HANDLEBAR SWITCHES CONTROL	25	MAIN/SIDE STAND LUBRICATION	61
i3s (IDLE STOP START SYSTEM)	27	TUBELESS TYRES	62
SIDE STAND INDICATOR/SWITCH	28	NUTS, BOLTS & FASTENERS	65
FUEL TANK	29	BATTERY	65
FUEL VALVE	30	FUSE REPLACEMENT	66
SEAT LOCK	30	STOP LAMP SWITCH	67
HELMET HOLDER	31	HEADLAMP FOCUS ADJUSTMENT	68
USB CHARGER	31	CATALYTIC CONVERTER	68
PRE-RIDE INSPECTION	32	POLISHING OF VEHICLE	69
STARTING THE ENGINE	34	BASIC TROUBLESHOOTING	70
RIDING	35	DELIVERY CERTIFICATE	
BRAKING	35	GENUINE PARTS	
PARKING	36	JOBS APPLICABLE TO PERIODIC SERVICES	
TOOL KIT	36	SERVICE RECORD SHEET	
CLEANING AND WASHING OF VEHICLE	37	SERVICE ADVICE SHEET	
MAINTENANCE	37	OWNERSHIP RECORD AND DATA	
SAFETY PRECAUTION	38		
MAINTENANCE SCHEDULE	39		

VEHICLE IDENTIFICATION



Vehicle Identification Number (VIN)

Location: Stamped on the right side of the steering head tube.

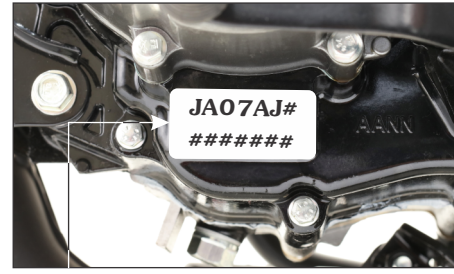

Engine No.

Location: Stamped on the lower side of the left crankcase.

VIN: PS1JAW27#########

PS1	JAW28	#	#	#	#	#####
Manufacturer code	Vehicle Description	Check Digit	Model Year	Plant Code	Month of Manufacturing	Production Serial Number

Engine No.: JA07AG########

JA07AJ	#	#	#	#####
Engine Description	Year of Manufacturing	Assembly Plant	Month of Manufacturing	Serial Number

Model: IGNITOR FV XTEC


Variant	VIN	Engine
Disc with CBS (Premium)	JAW28	JA07AJ
Disc with non-CBS	JAS15	JA07AK

VIN and Engine No. may be required:

1. During registration of the vehicle.
2. For dealing with legal & insurance departments.

VEHICLE VIEWS


TOP VIEW

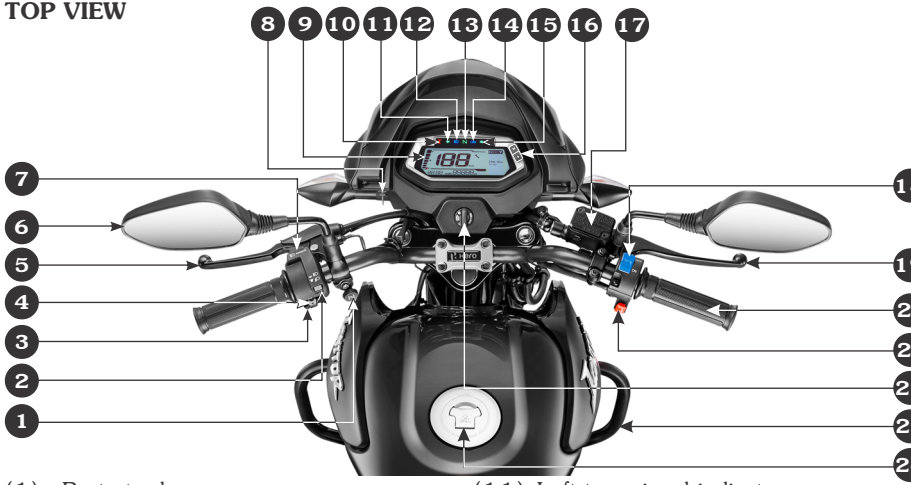

(1) Bystarter lever
(2) Dimmer switch
(3) Horn switch
(4) Turn signal switch
(5) Clutch lever
(6) Rear view mirror
(7) Passing switch
(8) USB charger
(9) LCD panel of Meter console. Refer instruments and indicators **(page 15)** for fuel gauge, speedometer and other features of console
(10) Side stand indicator
(11) Left turn signal indicator
(12) High beam indicator
(13) Neutral indicator
(14) i3s indicator
(15) Right turn signal indicator
(16) Mode/Reset button
(17) Front brake master cylinder/Reservoir
(18) i3s switch
(19) Front brake lever
(20) Throttle grip
(21) Electric starter switch
(22) Ignition switch with steering lock
(23) Leg guard
(24) Fuel tank cap

***Accessories and features shown may not be part of standard fitment.**

LEFT SIDE VIEW

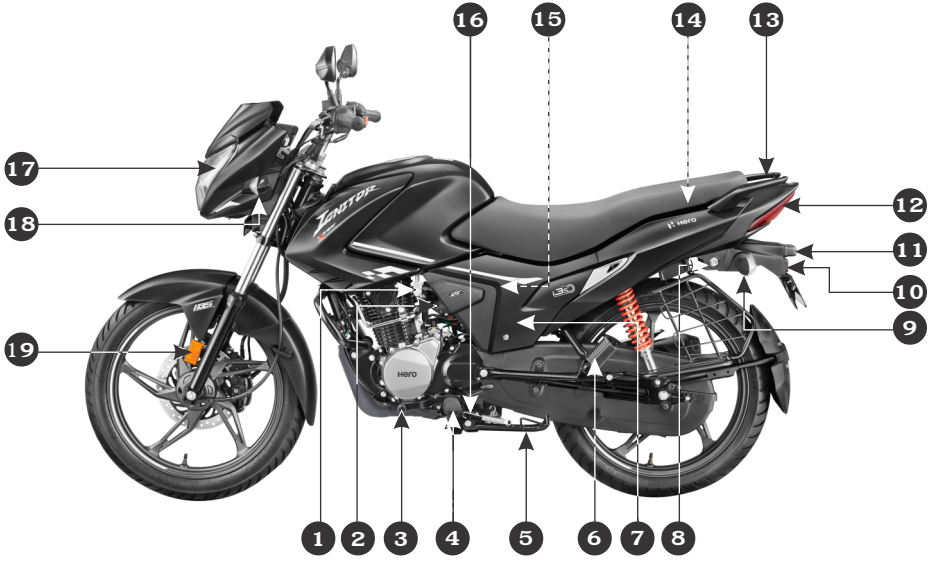

(1) Fuel valve
(2) Carburetor
(3) Gear shift pedal
(4) Rider footrest
(5) Side stand
(6) Pillion footrest
(7) Left side cover
(8) Seat lock
(9) Rear turn signal lamp
(10) Rear reflex reflector
(11) Licence plate lamp
(12) Tail/Stop lamp
(13) Rear grip
(14) Helmet holder (inside)
(15) Battery (inside)
(16) Side stand switch
(17) Position lamp
(18) Front turn signal lamp
(19) Side reflex reflector

***Accessories and features shown may not be part of standard fitment.**

RIGHT SIDE VIEW



(1) CBS Actuator (inside)#
(2) Brake fluid reservoir#
(3) Kick starter pedal
(4) Oil level dipstick
(5) Brake pedal
(6) Starter motor
(7) Front fender
(8) Caliper assembly#
(9) Front brake disc#
(10) Front suspension
(11) Front turn signal lamp
(12) Headlamp
(13) Front visor
(14) Seat
(15) Rear fender
(16) Rear shock absorber
(17) Rear hugger fender
(18) Exhaust muffler

#IBS variant

***Accessories and features shown may not be part of standard fitment.**

VEHICLE SPECIFICATION

ITEM		SPECIFICATIONS
Dimensions		
Overall length		1959 mm
Overall width		743 mm
Overall height		1074
Wheelbase		1273 mm
Saddle height		798 mm
Ground clearance		180 mm
Weight		
Kerb weight	With IBS	124 kg
	Without IBS	123 kg
Payload		130 kg
Capacities		
Engine oil		0.95 litre at disassembly and 0.75 litre at draining
Fuel tank capacity		10 litres
Engine		
Maximum power		7.75 kW @ 7750±500 r/min
Maximum torque		10.40 N-m @ 5500 r/min
Bore and stroke		52.4x57.8 mm
Compression ratio		9.9:1
Displacement		124.7 cc
Spark plug		NGK-CPR 7EA9, RG8YC (Federal Mogul)
Spark plug gap		0.8-0.9 mm
Valve clearance	Intake (cold)	0.08 mm
	Exhaust (cold)	0.12 mm
Idle speed		1400±100 r/min
Chassis and suspension		
Front suspension		Telescopic hydraulic shock absorbers
Rear suspension		Swingarm with 5 step adjustable hydraulic shock absorbers
Caster angle		26°
Trail length		92 mm
Tyre size	Front	80/100-18″ (Tubeless tyre)
	Rear	100/80-18″ (Tubeless tyre)

VEHICLE SPECIFICATION

ITEM		SPECIFICATIONS
Brakes	Front (Disc type)	Dia. 240 mm
	Rear (Drum type)	Dia. 130 mm
Transmission		
Primary reduction		3.35 (67/20)
Final reduction		3.214 (45/14)
Transmission		5 Speed transmission
Gear ratio, 1st		3.17 (38/12)
2nd		1.83 (33/18)
3rd		1.272 (28/22)
4rd		1.04 (26/25)
5th		0.923 (24/26)
Electricals		
Battery		*MF battery, 12V-4Ah/ETZ5
Alternator		120W/5000 r/min
Starting system		Kick/Electric start
Headlamp (High/Low)	Premium	LED
	Base	12V-35W/35W Halogen bulb-MFR**
Tail/Stop lamp		12V-5/21W
Turn signal lamp		12V-10Wx4 (Amber bulb) with clear lens-**MFR
Meter illumination		LED
Neutral indicator		LED
Turn signal indicator (RH + LH)		LED
Position lamp		12V-5.0W
Hi beam indicator		LED
i3s indicator		LED
Side stand indicator		LED
Licence plate lamp		12V-5.0W
Fuse		20A, 15A, 10A

***MF stands for Maintenance Free**
****MFR stands for Multi-Focal Reflector**

ACCESSORIES & MODIFICATIONS

Modifying your vehicle or using non-genuine accessories can make your vehicle unsafe. Before you consider making any modifications or adding an accessory, be sure to read the following information.

⚠ WARNING

- ***Improper accessories or modifications can cause a crash in which you can be seriously hurt or killed.***
- ***Follow all instructions in this owner's manual regarding accessories and modifications.***

Accessories

- Make sure that the accessory does not obscure any lamps, reduce ground clearance, limit suspension travel or steering travel, affect your riding position or interfere with operating any controls.
- Be sure electrical equipment does not exceed the vehicle's electrical system capacity **(page 6).** A blown fuse can cause a loss of lights.
- Do not pull a trailer or sidecar with your vehicle. This vehicle was not designed for these attachments, and their use can seriously impair your vehicle's handling.

Modifications

We strongly advise you not to remove any original equipment or modify your vehicle in any way that would change its design or operation. Such changes could seriously impair your vehicle's handling, stability and braking, making it unsafe to ride. Removing or modifying your lamps, mufflers, emission control system or other equipment can also make your vehicle illegal.

ANTI-THEFT TIPS

- Always lock the steering and never leave the key in the ignition switch. This sounds simple but people do forgets.
- Be sure the registration information for your vehicle is accurate and correct.
- Park your vehicle in a locked garage whenever possible.
- Use an additional anti-theft device of good quality.
- Never park your vehicle in an isolated area. Park as far as possible in a designated area.
- Enter your name, address and phone number in this Owner's Manual and keep it in your vehicle at all times. Many times stolen vehicles are identified by information in the Owner's Manuals that are still with them.

NAME: _____

ADDRESS: _____

_____

_____

_____

PHONE NO : _____

VEHICLE SAFETY

IMPORTANT SAFETY INFORMATION

Your vehicle can provide many years of service and pleasure if you take responsibility for your own safety and understand the challenges you can meet on the road.

There is much that you can do to protect yourself when you ride. You will find many helpful recommendations through out this manual. Following are a few that we consider most important.

Always wear a helmet

It is a proven fact, helmet significantly reduces the number and severity of head injuries. So always wear a helmet and make sure your pillion rider does the same. We also recommend that you wear eye protection, sturdy boots, gloves and other protective gear.

Before riding your vehicle

Make sure that you are physically fit, mentally focused and free of alcohol and drugs. Check that you and your pillion are both wearing an approved vehicle helmet and protective apparel. Instruct your pillion on holding onto the grab rail or your waist, leaning with you in turns, and keeping their feet on the footrest, even when the vehicle is stopped.

Take time to learn & practice your vehicle

Even if you have ridden other vehicles, practice riding in a safe area to become familiar with how this vehicle works and handles, and to become accustomed to the vehicle's size and weight.

Ride defensively

Always pay due attention to other vehicles around you, and do not assume that other drivers see you. Be prepared to stop quickly or perform an evasive maneuver.

Make yourself easily visible

Some drivers do not see vehicles because they are not looking for them. To make yourself more visible, wear bright reflective clothing, position yourself so that others can see you, signal before turning or changing lanes, and use horn which will help others to notice you.

Ride within your limits

Pushing the limits is another major cause of vehicle accidents. Never ride beyond your personal abilities or faster than conditions demand. Remember that fatigue and negligence can significantly reduce your ability to make good judgements and ride safely.

Do not drink and ride

Riding under the influence of alcohol or drugs is dangerous. Alcohol can reduce your ability to respond to changing conditions and reduce the reaction time. Do not drink and ride.

Keep your vehicle in safe condition

For safe riding, its important to inspect your vehicle before every ride and perform all recommended maintenance. Never exceed load limits, and use accessories that have been recommended by HMCL Niloy Bangladesh Ltd. for this vehicle.

If you are involved in a crash

Personal safety is your first priority. If you or anyone else has been injured, take time to assess the severity of the injuries and whether it is safe to continue riding. Call for emergency assistance if needed. Also follow applicable laws and regulations if another person or vehicle is involved in the crash.

If you decide to continue riding, first evaluate the condition of your vehicle. If the engine is still running, turn it off. Inspect for fluid leaks, check the tightness of critical nuts and bolts, and check the handlebar, brake levers, brakes, and wheels. Ride slowly and cautiously. Your vehicle may have suffered damage that is not immediately apparent. Have your vehicle thoroughly checked at a qualified service facility as soon as possible.

PROTECTIVE APPAREL

For your safety, we strongly recommend that you always wear a helmet which should conform as per your country standards, in addition to eye protection, boots, gloves, long pants and a long sleeve shirt or jacket whenever you ride. Take care of loose/ hanging clothes while solo/pillion riding. Although complete protection is not possible, wearing proper gear can reduce the chance of injury when you ride.

Following are suggestions to help you choose proper riding gear.

⚠ WARNING

- ***Not wearing a helmet increases the chance of serious injury or death in a crash.***
- ***Be sure you and your pillion always wear a helmet, eye protection and other protective apparel when you ride.***

Helmets and eye protection

Your helmet is your most important piece of riding gear because it offers the best protection against head injuries. A helmet should fit your head comfortably and securely. A bright coloured helmet can make you more noticeable in traffic, as can reflective strips.

An open-face helmet offers some protection, but a full-face helmet offers more. Always wear face shield or goggles to protect your eyes and help your vision.

Additional riding gear

In addition to a helmet and eye protection, we also recommend:

- Sturdy boots with non-slip soles to help protect your feet and ankles.
- Leather gloves to keep your hands warm and help prevent blisters, cuts, burns, and bruises.
- A two wheeler riding suit or jacket for comfort as well as protection. Bright coloured reflective clothing can help make you more noticeable in traffic. Be sure to avoid loose clothes that could get caught on any part of your vehicle.

SAFE RIDING TIPS

Do's:

- Always conduct simple pre-ride inspection **(page 32)**.
- Always wear a helmet with chinstrap securely fastened and insist on a helmet for your pillion rider. Helmet should conform as per safety standards applicable in your country.
- While riding, sit in a comfortable position with your legs close to fuel tank.
- Ride defensively and at a steady speed (between 40-50 km/hr).
- To stop the vehicle (in IBS), press the rear brake pedal for the application of front and rear brakes simultaneously. However, for more effective braking, use both brakes simultaneously, keeping throttle in the closed position.
- During night time, dip headlamps of your vehicle for oncoming traffic, or when following another vehicle.
- Give way to others on the road and signal before you make a turn.
- To make yourself more visible, wear bright reflective clothing that fits well.
- Tightly wrap loose/hanging clothes & avoid entangling with moving parts.
- Get your vehicle serviced regularly by the Authorised Distributor/Dealer.
- Before riding make sure in which mode you are riding whether with i3s switch "ON' or "OFF".

Don't

- Never use cell phone while riding the vehicle.
- Avoid sudden acceleration, braking and turning of your vehicle.
- Never shift gears without disengaging the clutch and closing the throttle.
- Never touch any part of the hot exhaust system like muffler.
- Never ride under the influence of alcohol or drugs.
- Concentrate on the road and avoid talking to the pillion rider or others on the road.
- Do not litter the road.
- Do not cross the continuous white/yellow line in the center of the road, while overtaking.
- Do not attach large or heavy items to the handlebars, front forks, or fenders.
- Never take your hands off the steering handle while riding.
- Navigation system assists you to reach your destination, don't be distracted while driving. Drive safely and always obey traffic rules.

TIPS FOR HEALTHY ENVIRONMENT

The following tips shall ensure a healthy vehicle, healthy environment, and a healthy you.

- **Healthy engine:** The engine is the lifeline of every vehicle. To keep it healthy, it should be tuned regularly, which will also help reduce pollution and improve vehicle performance & fuel efficiency.

- **Regular servicing:** Get your vehicle serviced at an Authorised Distributor/Dealer, as per the service schedule, for an optimum performance and keep the emission level under check.

- **Genuine spares:** Always insist on genuine parts as spurious or incompatible spares and accessories can upset or deteriorate your vehicle's running condition.


- **Genuine engine oil:** Hero 4T Plus SAE 10W 30 SL grade (JASO MA2) engine oil recommended by HMCL Niloy Bangladesh Ltd. and make sure you change it every 6000 km. (with top up every 3000 kilometres) to keep the engine fit and environment healthy.


- **Noise pollution :** Noise beyond a certain decibel is pollution. Whether it is from horns or defective mufflers, excessive noise will cause headaches and discomfort.

- **Fuel saving & Reduce pollution :** Switch "OFF" the engine while waiting at traffic signal points to save fuel and reduce pollution, if the waiting period is long.

PARTS FUNCTION

Ignition switch

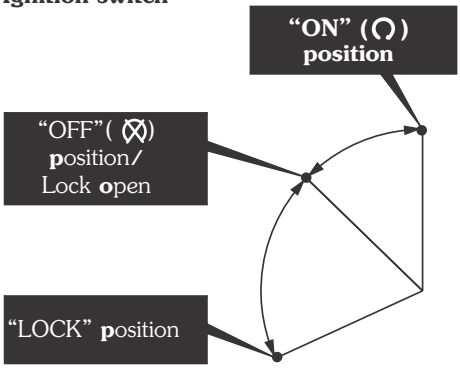

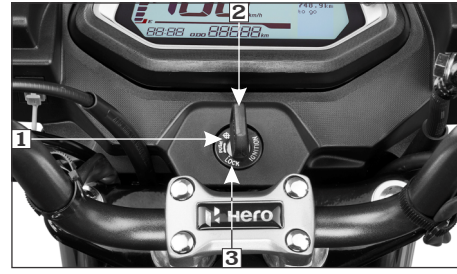


(1) Ignition switch
(2) Ignition key
(3) Steering lock position

Key position	Function	Key removal
"ON" (⏻)	The LCD panel illuminates & initial display of multi function digital segments are displayed. The fuel gauge segment will swing to the maximum scale once and back to its normal position. The engine can be started. Turn signal lamp, horn, tail/stop lamp, fuel gauge, pass lamp, position lamps & neutral indicator will be functional. i3s indicator glows for 2 seconds.	Key cannot be removed
"OFF"(⊗)	Engine cannot be started and no electrical system will be functional.	Key can be removed
"LOCK"	Steering can be locked.	Key can be removed

Instruments and Indicators

The indicators are in the speedometer panel above the headlamp. The functions are as below.

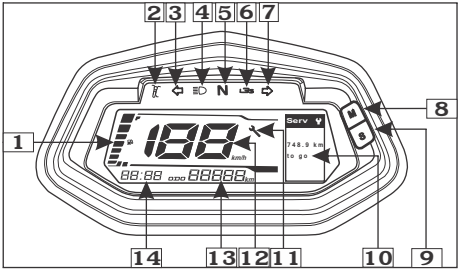

Sl. No.	Description	Function
1	Fuel gauge	Indicates approximate fuel available in the form of digital segments. The digital segments will swing to maximum scale on the meter console once the ignition switch is turned "ON" (Ω) **(page 18).**
2	Side stand indicator	Light glows when the vehicle is parked on the side stand.
3	Turn signal indicator (L)	Flashes when left turn signal switch is operated.
4	High beam indicator	Light glows when headlamp is in high beam.
5	Neutral indicator	Light glows when vehicle is in neutral.
6	i3s indicator	Indicator glows for 2 seconds and turns "OFF" indicating that i3s system is functional.
7	Turn signal indicator (R)	Flashes when right turn signal switch is operated.
8	Mode button	Switches display between odometer, tripmeter-1 & 2, clock, eco mode & bluetooth connectivity.


Sl. No.	Description	Function
9	Set button	To adjust clock, date & tripmeter. When long pressed resets tripmeter to zero.
10	Next service distance	Indicates how many kilometers are left before the next service is due. It appears for few seconds when the ignition switch is turned "ON" (ↀ) **(page 18).**
11	Service reminder indicator	Displays when the next service is due **(page 18).**
12	Speedometer	Indicates riding speed**.**
13	Odometer	Shows accumulated distance travelled **(page 16).**
14	Digital clock	Indicates hours & minutes **(page 15)**.

LCD PANEL

(a) Digital clock


Digital clock (1) shows hour and minute. To adjust the time, proceed as follows :

- Turn the ignition switch "ON" (Ω).
- Press and hold set button (2) and mode button (3) simultaneously for more than 2 seconds. The clock will be set in the adjust mode with the hour's digit display blinking.

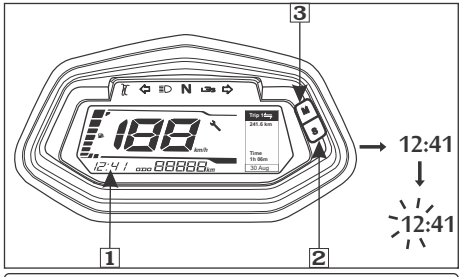


(1) Digital clock **(2) Set button**
(3) Mode button

- To set the hour, press set button (2) until the desired hour is displayed.
  - The time is advanced by 1 hour each time the button is pressed.
  - The time advances fast when the button is pressed and held.

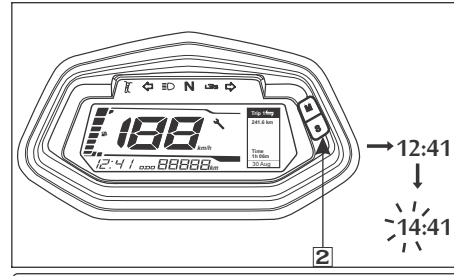

(2) Set button


- Press the mode button (3). The minutes display starts blinking.

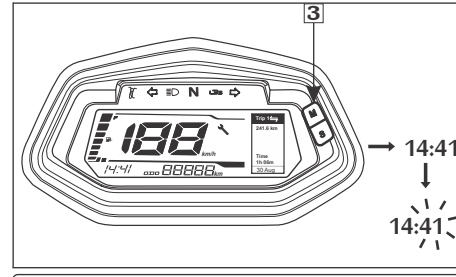

(3) Mode button

- To set the minute press set button (2) until the desired minute is displayed. The minute display will return to "00" when "60" is reached without affecting the hour display.
  - The time advances by 1 minute, each time the button is pressed.

• The time advances fast when the button is pressed and held.

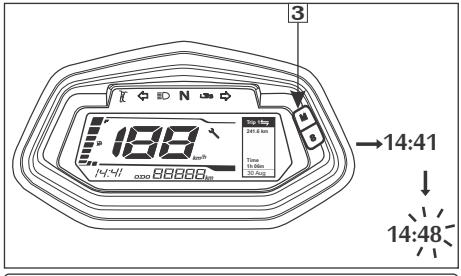

(3) Mode button

• To end the adjustment press the mode button (3) until clock display stops blinking.

NOTE

- ***The clock will reset to "1:00" if the battery is disconnected.***
- ***If mode or set buttons are not operated for 30 seconds or more, the setting will be invalid and return to the normal operation. When ignition switch is turned "OFF", the value immediately before "OFF" shall be set.***

(b) Odometer/Tripmeter

The odometer (1) shows accumulated distance travelled.

The tripmeter (2) shows distance travelled since trip meter was reset last time. There are two tripmeters, "Trip-1" and "Trip-2".


Push the mode button (3) to select "Trip-1" and "Trip-2". "Trip-1" and "Trip-2" can be displayed upto "999.9" km.

If the tripmeter exceeds "999.9" km it will return to "0.0" km automatically.

Trip meter displays following parameters:

- **Distance**: distance covered in a trip.
- **Avg Speed**: average speed at which vehicle completes a trip
- **Trip time**: time taken to complete a trip.
- **Date**: it shows the current date.

When tripmeter is selected, long press (more than 2 seconds) the set button to reset tripmeter to zero. The odometer can be displayed from "0 to 99999" km.

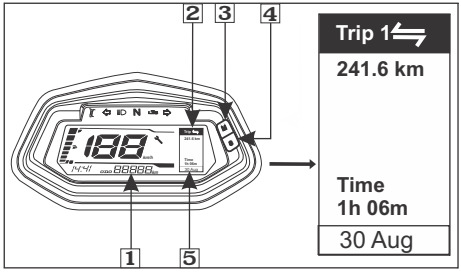


(1) Odometer **(2) Tripmeter**
(3) Mode button **(4) Set button**
(5) Date

To update the date proceed as follows :


- Turn the ignition switch "ON" (⏻).
- Press and hold set button (4) and mode button (3) simultaneously for more than 2 seconds. The clock display will start blinking **(page 17)**.

• Keep pressing and releasing mode button (3) until date display (5) starts blinking.

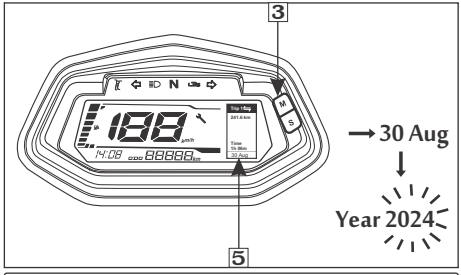


(3) Mode button **(5) Date display**

• Now to set year, press set button (4) until the desired year is displayed.

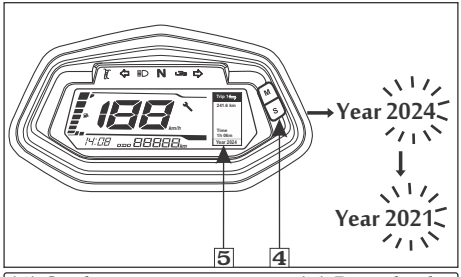


(4) Set button **(5) Date display**

• To set month, press the mode button (3) to switch from year to month display. Now press the set button (4) until the desired month is displayed.

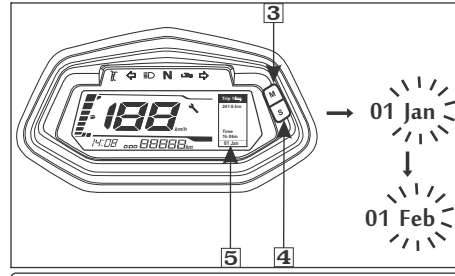

(3) Mode button **(4) Set button**
(5) Date display

• To set day, press the mode button (3) to switch from month to day display. Now press the set button (4) until the desired day is displayed.

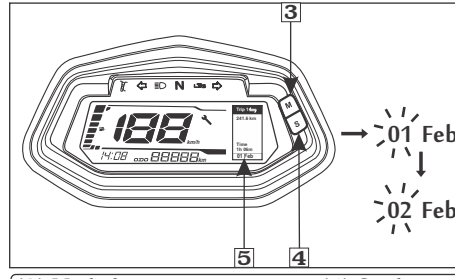

(3) Mode button **(4) Set button**
(5) Date display


• To end the adjustment press the mode button until date display stops blinking.

(c) Fuel gauge

The fuel gauge (1) indicates approximate fuel available in the form of digital segments.

The digital segments (2) will swing to maximum scale on the meter console once the ignition switch is turned "ON" (). If all the segments are displayed it means fuel quantity in the fuel tank is 10 litres.

If only one segment (3) is displayed and blinks, this indicates the fuel quantity is low and the fuel tank should be refilled as soon as possible.

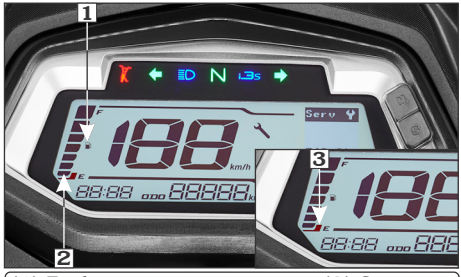

(1) Fuel gauge **(2) Segments**
(3) One segment

! CAUTION

Please ensure the vehicle is not used continuously when the fuel level indicator reaches the one segment blinking. It will result in the vehicle running out of fuel. Please ensure fuel is filled up as soon as the fuel level indicator reaches one segment blinking.


NOTE

To check the fuel level indication, the vehicle should be on levelled surface and in stationary condition.

(d) Service reminder indicator

The service reminder indicator (1) is to indicate the user to bring the vehicle to an Authorised Distributor/Dealer for service. The indicator shall start blinking when the vehicle covers kilometers as specified in the maintenance schedule. The indicator will keep on blinking throughout the kilometer interval for a particular service and will stay ''ON'' thereafter.

Meter console also displays the next service distance (2). It indicates how many kilometers are left before the next service is due. It appears for few seconds when the ignition switch is turned "ON" ().

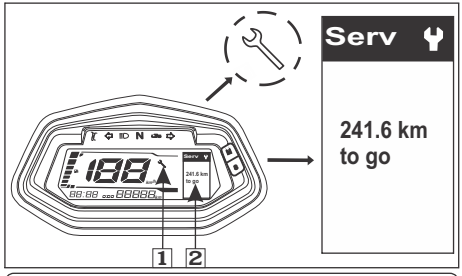

(1) Service reminder indicator
(2) Next service distance

The service reminder indicator " 🔧 " can be reset at an Authorised Distributor/Dealer.


NOTE

After getting the vehicle serviced, make sure that the Service Reminder Indicator has been reset.

FEATURES

(a) Steering lock

Steering lock with ignition switch, turn the ignition key (1) to "OFF" (⊠) position & turn the handlebar towards left or right & push the key downwards & turn towards "LOCK" position. After locking take out the ignition key.

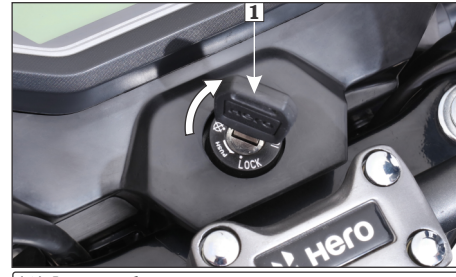

(1) Ignition key

(c) Hero ride guide / Navigation Application:

Hero navigation application (1) is available in the google play store (for androids) or App Store (for iOS), which can be installed in your device to access bluetooth, incoming calls alerts, missed call alerts, mobile low battery alert, and navigation features.

NOTE


- ***Compatibility and performance of hero ride guide application may very based on your device and software version.***
- ***Application needs GPS signal, internet and bluetooth connectivity to perform the desired navigation functionality.***

Bluetooth:

Your vehicle is equipped with bluetooth connectivity feature by which you can pair your smartphone with the meter console of your **IGNITOR FV XTEC** vehicle through Hero navigation application.

To connect your device proceed as follows:


- Turn the ignition switch "ON".
- Open hero navigation application on your smartphone.
- Give access to show incoming call information on digital cluster (1).

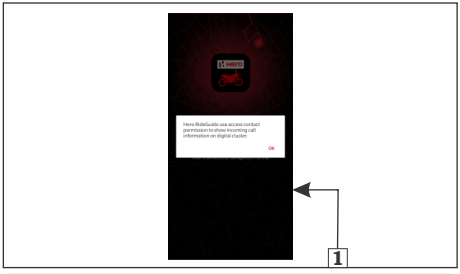


(1) Access for incoming call information on digital cluster

- For first time pairing, allow the application to access:


a. Contacts
b. Make & manage phone calls

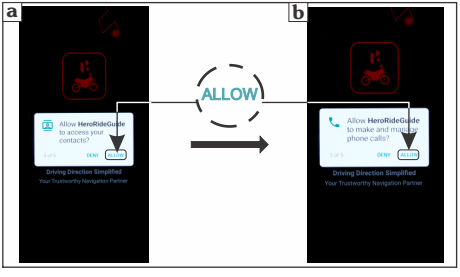

c. Phone call logs on your device
d. Device's location if GPS is not enabled in your device

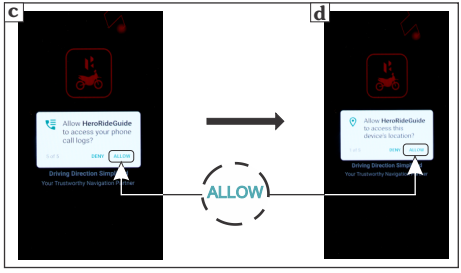


- Then the application will automatically start.
- Application also asks you to accept (2) the terms of use to proceed.

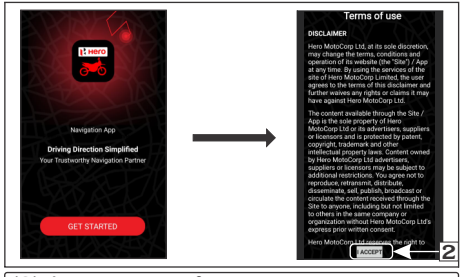


(2) Accept terms of use

- Now select your vehicle (3).
- Now application asks the user to turn the battery optimization off (4). It can be done by following the steps which are mentionedin the application or the user can ignore this step.

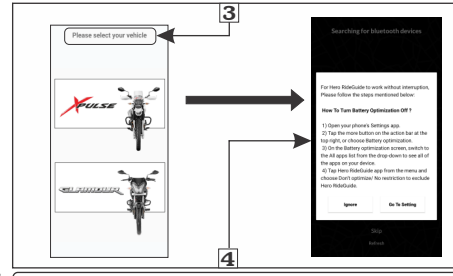


(3) Select your vehicle
(4) Battery optimization

- The application searches for a while and displays all nearby devices. Select the device with your name (5).
- Update your name (6) (if required) and select either save and connect (7) or connect (8) to proceed.

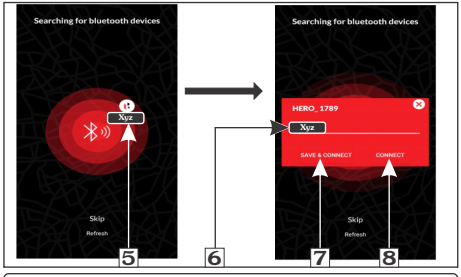


(5) Select your device (6) Update your name (7) Save and connect (8) Connect

- Now application will send paring request notification (9). Click on the notification.
- Now meter console will display paring pin (10).
- Enter the pin in navigation screen and select "OK" (11).

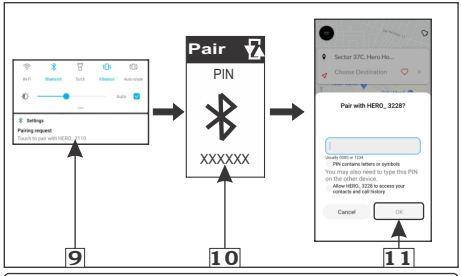


(9) Pairing request notification
(10) Pin (11) "OK"

- On pairing, meter console displays "Connected" (12) below bluetooth symbol in bluetooth mode (13).

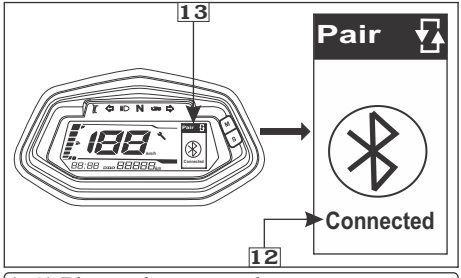

(12) Bluetooth connected
(13) Bluetooth mode

- If any error occurs during the course of pairing process, then meter console will display “Not found” (14) below bluetooth symbol. Repeat the above steps and keep your smartphone closer to the vehicle to reconnect.

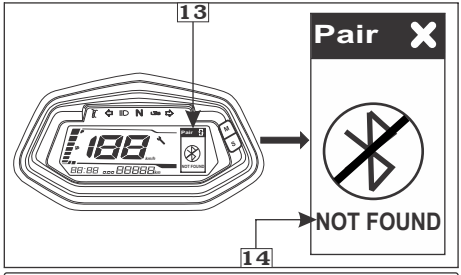

(13) Bluetooth mode **(14) Not found**

Autopairing


Your vehicle is equipped with autopairing feature by which if you turn ''OFF'' vehicle's ignition switch after successful pairing with hero navigation application, it will reconnect automatically once ignition switch is turned ''ON''.

NOTE

Always keep your smartphone close to your vehicle during the course of pairing, autopairing and navigation.


Incoming call alert

If your smartphone is paired with the meter console of your vehicle via bluetooth **(page 20)**, then you will get all the incoming calls alerts on the meter console. It will display the name of the caller if it is stored in your compatible smartphone. For example: If caller's number is stored in your compatible smartphone by name of Vijay, then your meter console will display Vijay calling (1).

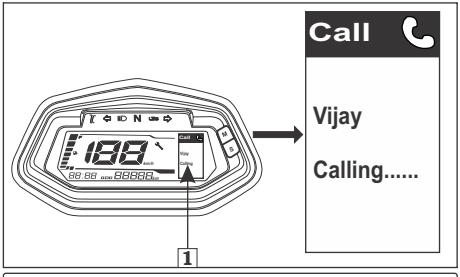

(1) Incoming call alert by name


If the number is not saved in your device by name or your device is an iOS, then it will display “unknown calling” (2).

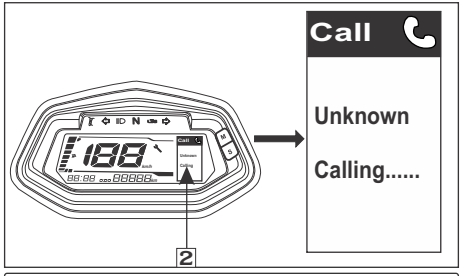

(2) Incoming call alert by unknown number

Missed call alert:

If your smartphone is paired with the meter console of your vehicle via bluetooth **(page 20)**, then you will get all the missed calls alerts (1) on the meter console.

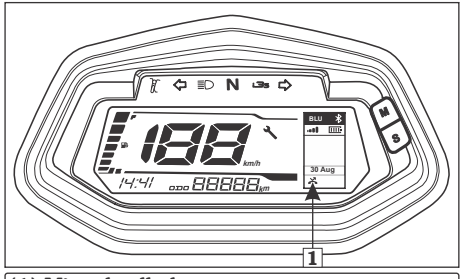


(1) Missed call alert

- If number of missed call are less than or equal to 9 then it will display number of missed calls as respective digit (2).
- If number of missed call are more than 9 then it will display as "X" (3).

Message alert:

If your smartphone (android) is paired with the meter console of your vehicle via bluetooth **(page 18)**, then you will get all the message alerts (1) on the meter console.

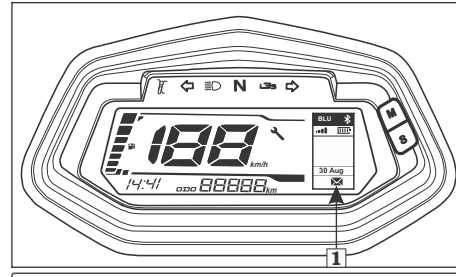


(1) Message alert

Phone battery status:

If your smartphone is paired with the meter console of your vehicle via bluetooth **(page 20)**, then it will display phone battery status (1) of your smartphone on the meter console.


4 bar display – 80-100%
3 bar display – 60-79%
2 bar display – 40-59%
1 bar display – 20-39%
1 bar blinks with outer line display –0-19%.

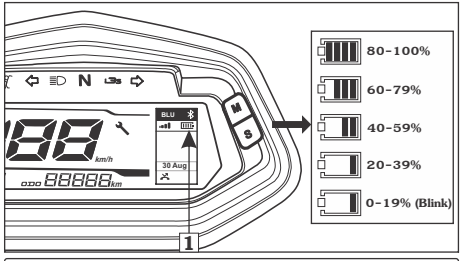

(1) Phone battery status

Phone signal strength:

If your smartphone is paired with the meter console of your vehicle via bluetooth **(page 20)**, then it will display phone signal strength (1) of your smartphone on the meter console.

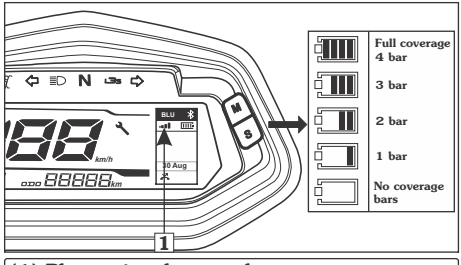

(1) Phone signal strength


HANDLEBAR SWITCHES CONTROL

Left handlebar controls

1. Passing switch

Gives an indication for passing ahead.

Press passing lamp switch (1) to operate the passing lamp.

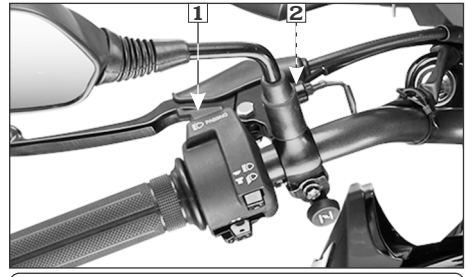

(1) Passing switch
(2) Clutch switch

2. Clutch switch

There is a clutch switch (2) provided for the safety of the rider. The vehicle cannot be started by electric starter switch until the clutch lever is operated when the vehicle is engaged in gear.


3. Headlamp dimmer switch

The headlamp operates only when the engine is running or when passing switch (3) is operated. Select " " for high beam and " " for low beam.

4. Turn signal lamp switch

Shift the turn signal lamp switch (4) sideways for right/left indications and leave it to come back to its normal position on its own.

IMPORTANT: To switch "OFF" the turn signal after completing the turn, gently push inside.

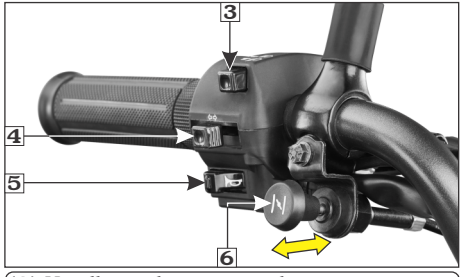

(3) Headlamp dimmer switch
(4) Turn signal lamp switch
(5) Horn switch **(6) Bystarter knob**

5. Horn switch

Press the horn switch (5) to operate the horn.

6. Bystarter Knob

To apply bystarter, pull the knob (6) towards the rider.


NOTE

Do not accelerate during starting when the bystarter is "ON".

Right handlebar controls

1. Electric starter switch

Ensure starter switch (1) is operated when the vehicle is in neutral gear. If the vehicle is engaged in gear, press the clutch lever before operating the starter switch. Release starter switch after the engine has started.

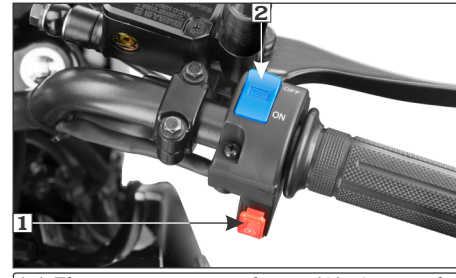

(1) Electric starter switch **(2) i3s switch**

2. i3s switch

There is an i3s switch (2) provided to enable the rider for turning i3s mode "ON" or "OFF" based on the traffic conditions.

CAUTION


- ***Never hold electric starter switch continuously more than 5 seconds as continuous cranking of engine will drain the battery.***
- ***During electric or clutch start, the engine will cut-off if engine reaches 900 rpm if the relay is engaged for more than 5 seconds.***

i3s (Idle stop start system)

Starting & Warm up the engine:

Keep the i3s switch (1) to "OFF" position. Turn the ignition key to "ON" position. The i3s indicator (2) will glow on the speedometer console for 2 seconds and turn "OFF".

Start the engine and let it idle for 2-3 minutes.

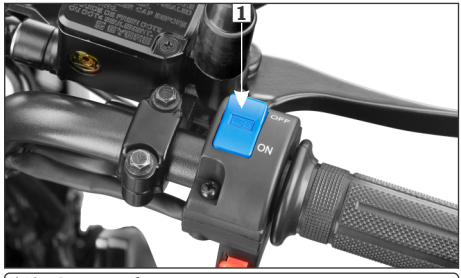

(1) i3s switch



(2) i3s indicator

NOTE

- ***The engine will stall if the i3s switch is in "ON" position during warmup.***
- ***Use choke during cold conditions.***

Initial Activation of the i3s system:

Keep the i3s switch (1) to "ON" position. Turn the Ignition key to "ON" position. The i3s indicator (2) on the speedometer console will glow for 2 seconds and turn "OFF". Start the vehicle and allow the engine to run in neutral gear position with the rpm less than 2000 rpm. The engine will cut off in 30 secs. After the first stop start every subsequent stop will be in 5 secs.

In this condition, the engine can be restarted either with kick or electric start only.

Driving with i3s Switch in "ON" position:

While driving, if the engine is kept idling (while waiting in a traffic signal), the engine will cut Off in 5 secs. (The vehicle should be in neutral

Less then 2000 rpm with clutch lever/throttle is in released position) By pressing the clutch lever, the engine will start again and gear can be engaged to move the vehicle.

Driving with i3s Switch in "OFF" position:

While driving in a traffic jam/or very dense traffic where the vehicle has to encounter a stop and go situation, the i3s switch can be changed to "OFF" position. Once this is done, the i3s system will not work and the vehicle will be in normal operating conditions as other vehicles and no special functions will be performed.

NOTE

- ***If the battery voltage is low, the i3s system will not work. The i3s indicator on the speedometer console will start to blink, if the rpm is less than 2000 rpm and the i3s indicator goes off if the rpm is more than 2000 rpm. The vehicle will be in normal operating conditions as other vehicles and no special functions will be performed.***
- ***If the vehicle is driven without battery or with the dead battery, the i3s system will not work. The i3s indicator on the speedometer console will start to glow continuously.***
- ***The vehicle will be in normal operating conditions as other vehicles and no special functions will be performed.***
- ***During electric or clutch start, the engine will cut-off***
- ***if engine reaches 900 rpm***
- ***if the relay is engaged for more than 5 seconds.***


SIDE STAND INDICATOR/SWITCH

For the safety of the customer a side stand indicator (1) is provided.



(1) Side stand indicator

A side stand switch (2) is provided in the side stand, when the side stand is down (ignition switch "ON" (Ω), the switch enables the side stand indicator lamp to glow on the speedometer panel.

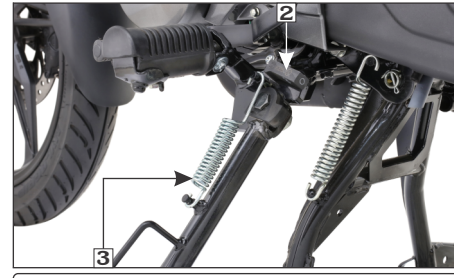

(2) Side stand switch (3) Side stand spring

- Check the side stand for proper function and the spring (3) for damage or loss of tension and the side stand assembly for free movement.
- Check whether the side stand indicator (1) glows when the side stand is down.
- While the vehicle is removed from side stand, the side stand indicator (1) should not glow.
- If the side stand indicator (1) does not operate as described in above steps, please visit your Authorised Distributor/Dealer.


! CAUTION

Ensure that adequate care should be taken while cleaning the side stand switch.


FUEL TANK

Fuel tank capacity is 10 litres (Minimum fuel to be maintained above one segment blinking of fuel level indicator).

- To remove the fuel tank cap (1), open the key hole cover (2) and insert the ignition key (3) turn it clockwise and remove the cap.

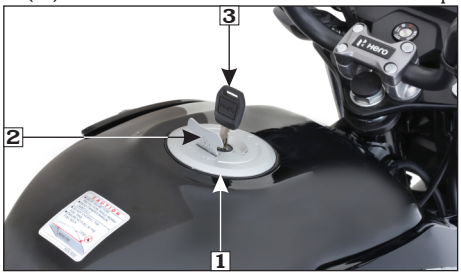

(1) Fuel tank cap (2) Key hole cover
(3) Ignition key

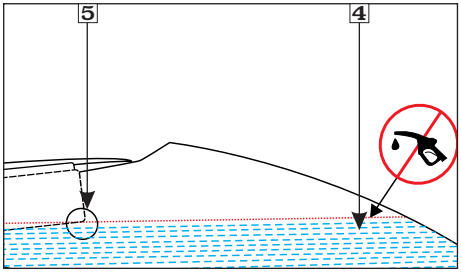

(4) Fuel (5) Filler neck

- Do not overfill the tank. There should be no fuel (4) in the filler neck (5).
- For locking, position the cap with "▲" mark facing towards the front, back on the opening and press gently. The key springs back to the normal position and the cap gets locked.

! CAUTION

Do not park the vehicle under direct sunlight as it causes evaporation of petrol due to heat and deterioration of paint gloss due to ultra violet rays.

⚠ WARNING


Petrol is extremely flammable and is explosive under certain conditions. Refill in a well ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where the vehicle is refilled or where petrol is stored.

Fuel valve

The three way fuel valve is on the left side of the carburetor.

"OFF" (○) Position


At "OFF" position (1), fuel cannot flow from the tank to the carburetor. Turn the valve "OFF" whenever the vehicle is not in use.

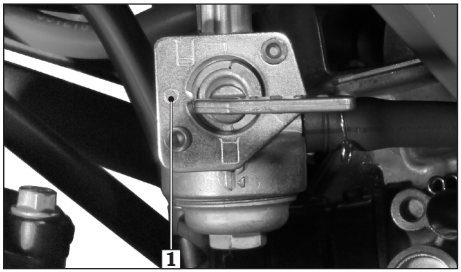

(1) "OFF" (○) position


"ON" (⊟) Position

At "ON" position (2), fuel will flow from fuel tank to the carburetor

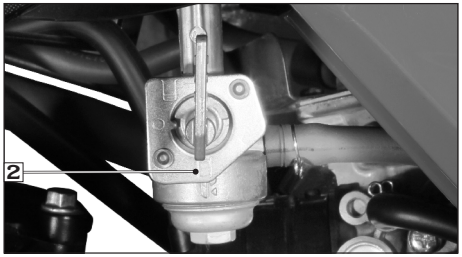

(2) "ON" (⊟) Position

"RES" (⊎) Position

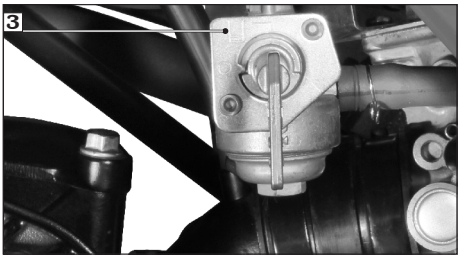


(3) "RES" (⊎) Position

At "RES" position (3), fuel will flow from the reserved fuel supply to the carburetor. Use the reserve fuel only when the main supply is exhausted. Refill the tank as soon as possible after switching to "RES". The reserved fuel supply is 1.4 litre.

SEAT LOCK

Location : On the rear left side of the seat, below the rear cowl.

Operation : To unlock the seat, insert the ignition key (1) and turn in clockwise direction. To install, engage the hook on the underside of the seat with the frame and push on the top rear side of the seat until the lock clicks.

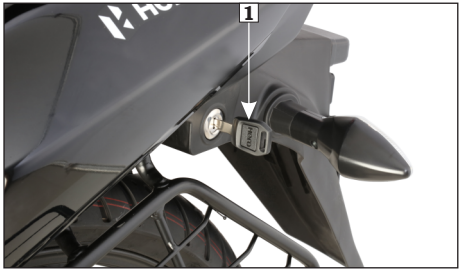


(1) Ignition key

HELMET HOLDER

The helmet holder is located below the seat. Remove the seat. Hang the helmet on the helmet holder (1) by using wire helmet set (2) (optional). Install the seat (3) and lock it securely.

⚠ WARNING


- ***Riding with a helmet attached to the holder can interfere with the rear wheel of suspension and could cause a crash in which you can be seriously hurt or killed.***
- ***Use the helmet holder only while parked. Do not ride with a helmet secured by the holder.***

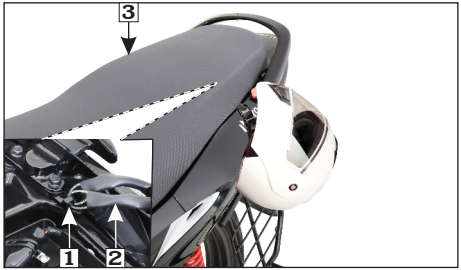

(1) Helmet holder hook
(2) Wire helmet set (optional) (3) Seat

USB CHARGER

A USB charger (1) with a cap (2) located on the left side of the inner panel (3) near meter console to charge your mobile phone safely while riding.

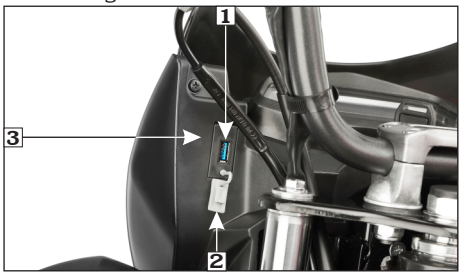

(1) USB charger (2) Cap (3) Inner panel

Use of non-standard USB cable may cause damage to the mobile phones.

To connect a mobile phone to the charger, first open the cap from the USB charger and then plug in the charger cable to it. HMCL Niloy Bangladesh Ltd. will not be responsible for damages caused due to use of non-standard USB cable.

CAUTION

- ***Always place the device in a soft clean cloth/towel to avoid any damage due to road shocks while riding.***
- ***Multiple charging of USB devices have to be avoided, simultaneous charging may lead to slow or no charging.***
- ***USB port is for charging compatible USB devices.***
- ***Do not leave the USB device and USB cable in the fuel tank cover when the vehicle is parked.***
- ***Charge your device when the engine is operational/while riding.***
- ***USB charger will not be covered under warranty in case of USB charger cap damage.***

NOTE

- ***Do not apply any soap solution, oil or grease inside the USB charger.***
- ***Any personal belongings have to be removed before water washing to avoid damage.***
- ***Always keep the USB port cap closed after use to prevent dust or water entry during rains/water wash.***
- ***Do not direct water jet towards the port even with cap closed to avoid any short circuit. Always dry the area using a dry cloth or moisture free compressed air before use.***
- ***Press the cap slightly for proper locking of USB charger cap.***
- ***The charging time of mobile may vary, depending on the mobile's battery state of the charge, mobile make and conditions.***

PRE-RIDE INSPECTION

You should conduct pre-ride inspection before riding the vehicle to enhance riding comfort and safety. Clean your vehicle regularly. It protects the surface finish. Avoid cleaning with products that are not specifically designed for vehicle surfaces. Inspect your vehicle very day before you start the engine. The items listed here will only take a few minutes, and in the long run they can save time, expense and possibly your life. Please follow the tips as given below:

- **Engine oil level-** Check and top up engine oil if required **(page 43).** Check for leaks.
- **Fuel level-**Ensure sufficient fuel is available in your fuel tank for journey **(page 18)**. Check for leaks.
- **Front brake (Disc variant)-** Check for correct brake fluid level in the master cylinder **(page 55).**
- **Rear brake (IBS variant)-** Check for correct brake fluid level in the reservoir **(page 56).**

- **Rear brake (Non IBS variant)–** Check operation. Adjust free play if necessary **(page 57)**.
- **Tyres–** Check condition and pressure **(page 62).**
- **Clutch–** Check for smooth operation. Adjust free play if necessary **(page 51)**.
- **Drive chain–** Check condition and slackness **(page 53).** Adjust and lubricate if necessary.
- **Throttle–** Check for smooth opening and closing in all steering positions **(page 52)**.
- **Lamps and Horn–** Check that headlamp, position lamp, tail/stop lamp, turn signal lamps and horn function properly.
- **Rear view mirror–** Ensure that the rear view mirror gives a good rear view when you are sitting on the vehicle.
- **i3s switch–** Make sure whether the i3s switch is in "ON" or "OFF" position **(page 27).**
- **i3s system–** Make sure that i3s system is functional properly **(page 27).**
- **Fitting & Fasteners–** Check & tighten if necessary.
- **Steering–** Check for smooth action for easy maneuverability.
- **Side stand–** Check for proper functionality **(page 28).**


STARTING THE ENGINE



1. Turn the ignition switch "ON".




3. Find neutral position & check Ⓝ indicator glows on instrument cluster with ignition "ON".

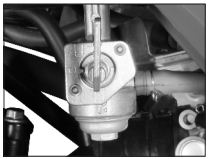

2. Turn the fuel valve "ON".




4. Make sure whether the i3s switch is in "ON" or "OFF" position.

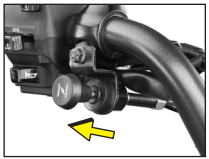

5. Pull the bystarter lever outwards to "ON" position as indicated (Use bystarter during cold conditions).



6. Open the throttle slightly & press the starter switch. (Alternatively kick starter pedal can be used for starting).

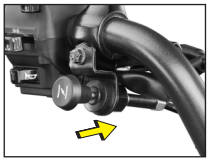

7. Push the bystarter knob inwards to "OFF", position as indicated, after the engine gets sufficiently warmed up to have a stable throttle response.

⚠ WARNING

Never run the engine in a closed area, the exhaust contains poisonous gases.

NOTE

- ***To start the engine in any gear position using the electric starter, press the clutch lever and push the starter switch.***
- ***Kick starting will not be possible when the transmission gears are engaged. Shift the transmission into neutral before kick starting.***
- ***Never attempt to kick start while vehicle is moving forward or backward. This may lead to damage to the product and is not safe as well.***
- ***Do not accelerate when starting the vehicle with the bystarter "ON".***

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the ignition switch "OFF" and turn the bystarter to "OFF". Close the throttle fully and crank the engine several times with the kick starter. Turn the ignition switch "ON" and start the engine without using bystarter.


Running in

During first 1000 km, do not operate the vehicle at more than 65 km/hr speed in top gear, 45 km/hr in third gear, 30 km/hr in second gear and 15 km/hr in first gear. Avoid full throttle operation.

During initial running-in, newly machined surfaces will be in contact with each other and these surfaces will wear-in quickly. Running in precautions till 1000 km will reduce initial Wear of engine components and increase its service life.

RIDING

- After the engine has been warmed up, the vehicle is ready for riding.
- While the engine is idling, press the clutch lever and depress the gearshift pedal to shift into 1st (low) gear.
- Slowly release the clutch lever and at the same time, gradually increase engine speed by opening the throttle. Coordination of the throttle and clutch lever will assure a smooth positive start.
- When the vehicle attains a moderate speed, close the throttle, press the clutch lever and shift to 2nd gear by depressing the gearshift pedal.
- The sequence is repeated progressively to shift 3rd, 4th and 5th (top gear).

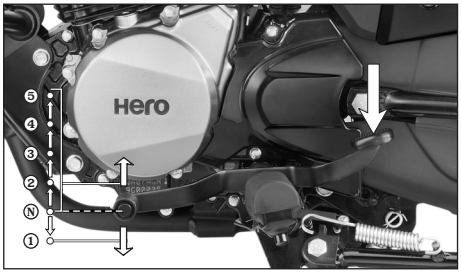

Recommended max. operating speed in each gear.

1st : 0-15 km/hr
2nd : 10-25 km/hr
3rd : 20-40 km/hr
4th : 25-50 km/hr
5th : 40 km/hr and above

! CAUTION

Do not shift gears without operation of clutch and without closing the throttle otherwise this would lead to damage of gears.

BRAKING

- For normal braking, close the throttle and gradually apply both front and rear brakes simultaneously while shifting down gears to suit your road speed.
- For maximum deceleration/quick stopping, close the throttle and apply the front and rear brakes simultaneously.

For integrated braking system (IBS)

To stop the vehicle, press the rear brake pedal for the application of front and rear brakes simultaneously. However, for more effective braking, it is advised to apply front and rear brake simultaneously, keeping the throttle in closed position.

⚠ WARNING

- ***When riding in wet or rainy conditions, or on loose surfaces, apply front brake carefully after applying rear brake to avoid wheel slip.***
- ***Extreme braking may cause wheel locking and reduce control over the vehicle.***
- ***Wherever possible, reduce speed or apply brake before entering a turn, closing the throttle or braking in mid turn may cause wheel slip. Wheel slip will reduce control over the vehicle.***
- ***When riding in wet or rainy conditions, or on loose surfaces the ability to stop the vehicle reduces.***
- ***All your actions should be smooth under these conditions. Sudden acceleration, braking or turning may cause loss of control. For your safety, exercise extreme caution when braking, accelerating or turning.***
- ***When descending a long steep slope use engine braking (power) by changing to lower gears, with intermittent use of both brakes. Continuous brake application can overheat the brakes and reduce their effectiveness.***

PARKING

After stopping the vehicle, shift the transmission to neutral, turn the fuel valve "OFF", turn the ignition switch "OFF", park the vehicle on main stand, lock the steering and remove the key.

! CAUTION

- ***Park the vehicle on firm level ground to prevent overturning.***
- ***While parking vehicle on side stand engage the first gear.***

TOOL KIT

The tool kit (1) is located below the seat in the rear. Some emergency repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit. Kit consists of following tool:

- Tool bag–1 No.
- +, – No. 2 Driver–1 No.
- Grip–1 No.
- Box wrench 16x14–1 No.
- Pin spanner–1 No.



(1) Tool kit

CLEANING AND WASHING OF VEHICLE

Follow the below mentioned steps for washing the vehicle.

- Wet the vehicle with light water spray. Avoid directing water meter console, muffler outlets and electrical parts.
- Clean the headlamp lens and other plastic parts using a cloth or sponge dampened with a solution of mild detergent and water.
- Rub the soiled area gently rinsing it frequently with fresh water.
- After cleaning spray water thoroughly.
- Dry the vehicle by wiping with dry soft cloth.

NOTE

- ***Our authorised dealership take all above mentioned precautions like recommended detergents and usage of muffler caps/plugs during wash to ensure quality wash.***
- ***Do not use high pressure water (or air). It can damage certain parts of the vehicle.***

MAINTENANCE

Importance of maintenance

A well-maintained vehicle is essential for safe economical and trouble-free riding. It will also help reduce pollution.

To help you, take proper care of your vehicle, the following pages include a maintenance schedule and a maintenance record for regular scheduled maintenance.

These instructions are based on the assumption that the vehicle will be used exclusively for its designed purpose.

Sustained high speed operation or operation in unusually wet or dusty conditions will require more frequent service than specified in the maintenance schedule.

Consult your Authorised Distributor/Dealer for recommendation applicable to your individual needs and use.

If your vehicle overturns or is involved in a crash, be sure that you visit your Authorised Distributor/Dealer for detailed inspections.

WARNING

- ***Improperly maintaining this vehicle or failing to correct a problem before you ride can cause a crash in which you can be seriously hurt or killed.***
- ***Always follow the inspection and maintenance recommendations and schedules in this owner's manual.***

Maintenance safety

This section includes instructions on some important maintenance tasks. You can perform some of these tasks with the tools provided (if you have basic mechanical skills).

Other tasks that are more difficult and require special tools are best performed by professionals. It is recommended that wheel removal should normally be handled by a Authorised Distributor/Dealer.

You will come across some of the most important safety precautions in the following pages of this manual.

However, we cannot warn you of every conceivable hazard that can arise in performing

Maintenance. Only you can decide whether or not you should perform a given task.

⚠ WARNING

- ***Failure to follow maintenance instructions and precautions properly can seriously injure you.***
- ***Always follow the procedures and precautions in this owner's manual.***

SAFETY PRECAUTIONS

- Make sure the engine is "OFF" before you begin any maintenance or repair. This will help to eliminate several potential hazards:
  - **Carbon monoxide poisoning from engine exhaust.**
    Be sure there is adequate ventilation whenever you operate the engine.
  - **Burns from hot parts.**
    Let the engine and exhaust system cool before touching.
  - **Injury from moving parts.**
    Do not run the engine unless instructed to do so.
- Read the instruction before you begin and make sure you have the tools and skills required.
- To help prevent the vehicle from falling over, park it on a firm, level surface on the main stand.
- To reduce the possibility of a fire or explosion, be careful when working around petrol or batteries. Use only nonflammable solvent, not petrol, to clean parts. Keep cigarettes, sparks and flames away from the battery and all fuel-related parts.

Remember that your Authorised Distributor/ Dealer knows your vehicle best and is fully equipped to maintain and repair it.

To ensure best quality and reliability, it is recommended to use only new genuine parts for repair and replacement.

MAINTENANCE SCHEDULE

Perform the pre-ride inspection **(page 32)** at each scheduled maintenance period.

I: INSPECT C: CLEAN R: REPLACE A: ADJUST O: OIL CHANGE L:LUBRICATE T: TOP UP E: EMISSION CHECK

The following maintenance schedule specifies all maintenance required to keep your vehicle in peak operating condition. Maintenance work should be performed in accordance with standards and specifications of HMCL Niloy Bangladesh Ltd. by properly trained and equipped technicians. Your Authorised Distributor/Dealer meets all of these requirements.

Ensure that each paid service is availed within 90 days or 3000 km from the date of previous service, whichever is earlier.

To be serviced by your Authorised Distributor/Dealer unless the owner has the relevant tools, technical information and is technically qualified.

In the interest of safety, we recommend that these jobs are carried out only by your Authorised Distributor/Dealer.

Note-1 : At higher odometer readings, repeat the frequency interval established here.

Note-2 : Replace air cleaner element once in every 15000 km or early replacement may be required when riding in dusty areas.

Note-3 : Replace engine oil once in every 6000 km. Top up once in every 3000 km.

Note-4 : Visit Authorised Distributor/Dealer for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 km.

Note-5 : Replace brake fluid once in a every 2 years or 30000 km, whichever is earlier.

Note-6 : Inspect & maintain specified torque.

Note-7 : Inspect the bearings free play, replace if necessary.

Note-8 : Replace front fork oil once in a every 2 years or 30000 km, whichever is earlier.

Note-9 : Inspect for any play in the rear suspension mounting bushes, replace if necessary.

Note-10 : Check idle CO emission along with idle r/min/idle CO adjustment (if required).

Note: Always wipe the water from the vehicle after washing. Use clean soft cloth or pressurized air for completely drying the water.

MAINTENANCE SCHEDULE

Dear Customer,

We would strongly recommend the following schedule, to keep your vehicle in perfect running condition and healthy environment. Vehicle subjected to severe use or ridden in dusty area will require more frequent servicing.

ITEMS		SERVICE	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th
		DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
		KM Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500
	Fuel Line		I	I	I	I	I	I	I	I	I	I	I
	Throttle Operation		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
	Bystarter Operation		I	I	I	I	I	I	I	I	I	I	I
	Carburetor/Engine Idle Speed		C, A	A	C, A	A	C, A	A	C, A	A	C, A	A	C, A
	Air Cleaner Element	Note-2	Do not open air cleaner element unless there is a drivability problem					R					R
	Spark Plug		I, C, A	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A	I, C, A	R	I, C, A	I, C, A
	Valve Clearance		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
	Engine Oil	Note-3	O	I, T	O	I, T	O	I, T	O	I, T	O	I, T	O
	Engine Oil Strainer Screen		C		C		C		C		C		C
	Engine Oil Filter		I		I		R		I		R		I
	Electric Starter		I	I	I	I	I	I	I	I	I	I	I
	Oil Circulation		I	I	I	I	I	I	I	I	I	I	I
	Drive Chain	Note-4	I,C,L,A at every 2000 km						I,C,L,A at every 2000 km				
	Drive Chain Slider			I	I	I	I	I	I	I	I	I	I
	Battery Voltage		I	I	I	I	I	I	I	I	I	I	I
	Brake Shoe		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A

	ITEMS	SERVICE	1st	2nd	3rd	4th	5th	6th	7th	8th	9th	10th	11th
		DAYS	1st 60	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90	Next 90
		KM Note-1	500-750	3000-3500	6000-6500	9000-9500	12000-12500	15000-15500	18000-18500	21000-21500	24000-24500	27000-27500	30000-30500
	Disc Wear/Pad Wear		I	I	I	I	I	I	I	I	I	I	I
	Brake Fluid	Note-5	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	I, T	R
	Brake System (Brake Cam & Brake Pedal)			C, L		C, L		C, L		C, L		C, L	
	Stop Lamp Switch		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
	Headlamp Focus		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
	Clutch Lever Free Play		I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A	I, A
	Side Stand Pivot Bolt		C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L
	Rear Brake Pedal/ Main Stand Pivot		C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L	C, L
	Side Stand Switch		I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C	I, C
	i3s System		I	I	I	I	I	I	I	I	I	I	I
	Nut, Bolts & Fasteners	Note-6	I	I	I	I	I	I	I	I	I	I	I
	Wheels Bearings	Note-7	I	I	I	I	I	I	I	I	I	I	I
	Wheels/Tyres		I	I	I	I	I	I	I	I	I	I	I
	Steering Head Bearing		I	I, A	I	I, A	I, L, A	I	I, A	I	I, L, A	I	I, A
	Front Suspension/Oil	Note-8	I	I	I	I	I	I	I	I	I	I	R
	Rear Suspension	Note-9	I	I	I	I	I	I	I	I	I	I	I
	Muffler (Catalytic Converter)	Note-10			I, E		I, E		I, E		I, E		I, E


SPARK PLUG INSPECTION

Recommended spark plugs:

NGK-CPR 7EA9, RG8YC (Federal Mogul)


For most riding conditions this spark plug heat range number is satisfactory. However, if the vehicle is going to be operated for extended periods at high speeds or near maximum power in hot climates, the spark plug should be changed to a cold heat range number, consult Authorised Distributor/Dealer on this if required.

- Clean any dirt around the spark plug base.
- Disconnect the noise suppressor cap (1) and remove the spark plug (2) with the help of spark plug box wrench provided in the tool bag.

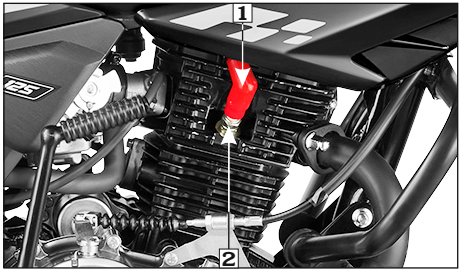

(1) Noise suppressor cap (2) Spark plug

- Visually inspect the spark plug electrodes for wear. The center electrode should have square edges and the side electrode should not be eroded. Discard the spark plug if there is apparent wear or if the insulator is cracked or chipped.

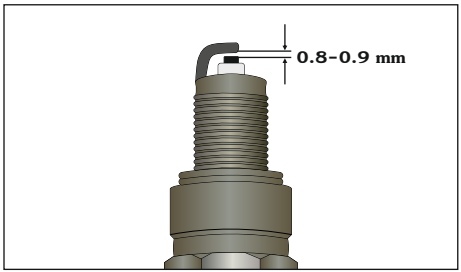

- Make sure that the spark plug gap is **0.8-0.9 mm** using a wire-type feeler gauge. If adjustment is necessary, bend the side electrode carefully. Make sure the plug washer is in good conditions.
- With the plug washer attached, thread the spark plug in by hand to prevent cross-threading.
- Tighten a new spark plug 1/2 turn with spark plug wrench to compress the washer. If you are reusing a plug, it should only take 1/8-1/4 turn after the plug seats.

! CAUTION

- ***Do not remove the spark plug and test for spark on the vehicle by cranking the engine as this could lead to fire or explosion***
- ***Install a dummy spark plug in the cylinder head and test for spark.***
- ***Never use a spark plug with improper heat range.***
- ***Always use resistor type spark plug.***

ENGINE OIL

Use only genuine engine oil.

BRAND: Hero 4T plus

GRADE: SAE 10W 30 SL Grade (JASO MA2).


Manufactured by:

- Tide Water Oil Co. (India) Ltd.
- Savita Oil Technologies Limited.
- Bharat Petroleum Corporation Limited.

OIL CAPACITY: 0.95 litre (disassembly)
: 0.75 litre (at oil change)

Engine oil level inspection/Top up process


Check engine oil level each day before operating the vehicle. The oil level dipstick (1) is on the right crankcase cover for measuring oil level. Oil level must be maintained between the upper (2) and lower (3) level marks on the oil level dipstick.

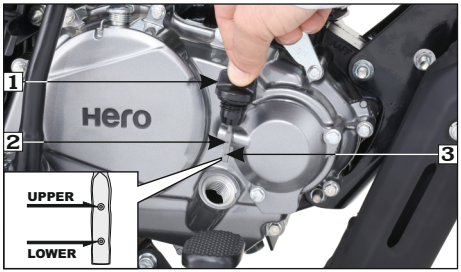

(1) Oil level dipstick (2) Upper level mark (3) Lower level mark

Do top up if oil level reaches towards the lower level mark or every 3000 km whichever is earlier.

- Park the vehicle on its main stand.
- Start the engine & let it idle for 3-5 minutes.
- Slightly loosen the engine oil check bolt (4) and check the engine oil entry into the cylinder head.

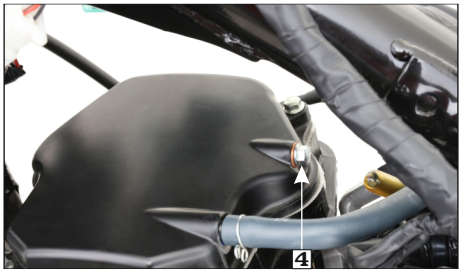

(4) Engine oil check bolt


- After checking the oil circulation, tighten the engine oil check bolt.
- Stop the engine and wait for 2-3 minutes.
- Remove the oil level dipstick, wipe it clean and insert without screwing it in.
- Remove the oil level dipstick and check the oil level.
- If required, add the specified oil up to the upper level mark. Do not overfill.

- Quantity of oil to be filled is 0.75 liters (approx.) during oil change when right crankcase cover is not removed.
- Reinstall the oil level dipstick and check for oil leaks.

Engine oil replacement process/
Oil circulation inspection

Drain engine oil with the engine warm and the vehicle on its main stand.

- To drain the oil, remove the oil level dipstick **(page 43)** and drain bolt (1) with sealing washer (2).
- After the oil has completely drained, reinstall the drain bolt with a new sealing washer.

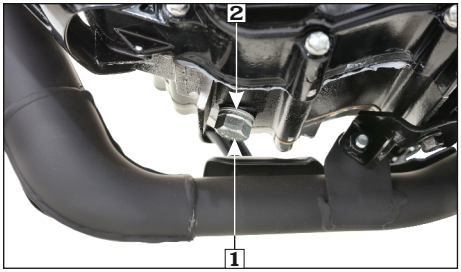

(1) Drain bolt **(2) Sealing washer**

- Fill the crankcase through the oil filler hole with 0.75 litre (approximately) of the recommended grade oil.
- Reinstall the oil level dipstick with a new O-ring.
- Start the engine and allow it to idle for few minutes.
- Stop the engine, let the engine oil settle down and recheck the oil level.
- Make sure that oil level is at the "UPPER" level mark of the oil level dipstick with the vehicle in an upright position and that there are no oil leaks.

! CAUTION


- ***Running the engine with insufficient oil can cause serious engine damage.***
- ***Running the engine with excessive oil can cause spark plug fouling & loss in performance.***
- ***Engine oil is a major factor affecting the performance and service life of the engine. Non-detergent, vegetable or castor based racing oils are not recommended.***

ENGINE OIL FILTER ELEMENT

NOTE


Drain the engine oil thoroughly (page 46) in case of engine oil filter element replacement.

- Remove the three mounting bolts (1).
- Remove the engine oil filter element cover (2) with O-ring (3).

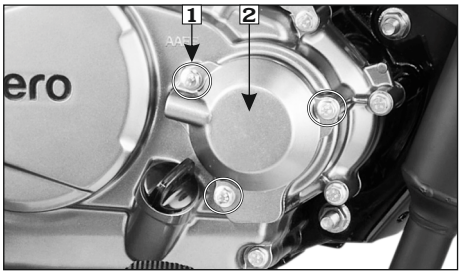


(1) Mounting bolts
(2) Engine oil filter element cover

- Remove the engine oil filter element (4) from the cover.

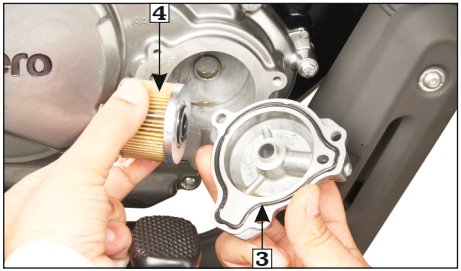

(3) O-ring **(4) Engine oil filter element**

- Replace the engine oil filter element (4).

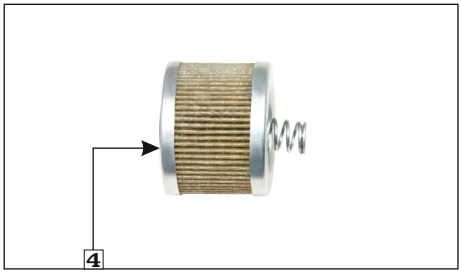

(4) Engine oil filter element


NOTE

- ***When the engine oil filter element replaced always replace the O-ring with the new one.***
- ***Make sure that O-ring is properly seated.***
- ***Apply engine oil on engine oil filter element before installation.***
- ***Inspect and replace engine oil filter element as specified in the maintenance schedule.***

- Installation is in the reverse order of removal.


OIL FILTER SCREEN

- Drain the engine oil thoroughly **(page 44)**.
- Remove the side stand switch screw (1).
- Disconnect the clutch cable (2).
- Remove the exhaust muffler (3), rider footrest assembly with side stand (4), kick starter pedal (5) and right crankcase cover (6).

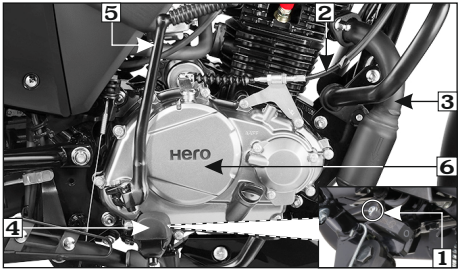

(1) Side stand switch screw
(2) Clutch cable (3) Exhaust muffler
(4) Rider footrest assembly with side stand
(5) Kick starter pedal (6) Right crankcase cover

- Remove the gasket (7) and dowel pins (8).
- Remove the oil filter screen (9) and wash it in clean non flammable or high flash point solvent (kerosene).

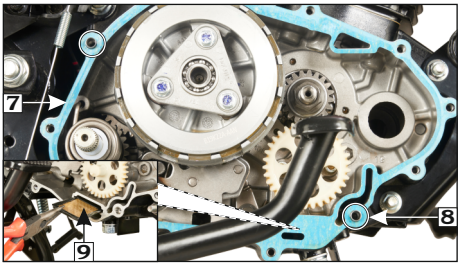

(7) Gasket (8) Dowel pins
(9) Oil filter screen

- Reinstall the oil filter screen with the sharp edged side facing inwards.
- Reinstall the dowel pins, new gasket, crankcase cover, kick starter pedal, rider footrest assembly with side stand, exhaust muffler and clutch cable.
- Install the side stand switch screw.
- Adjust the clutch cable free play, if required **(page 51)**.
- Fill the crankcase with clean engine oil as per specification.

NOTE


Ensure to replace gasket with new one once removed.

AIR CLEANER

Air cleaner element inspection


The air cleaner is viscous paper pleated type filter which has enhances filtering efficiency. The air cleaner should be replaced at regular intervals **(page 39).** When riding in dusty areas, more frequent replacement may be necessary.

- Remove the seat **(page 30).**
- Remove the air cleaner cover screws (1) and the cover (2).

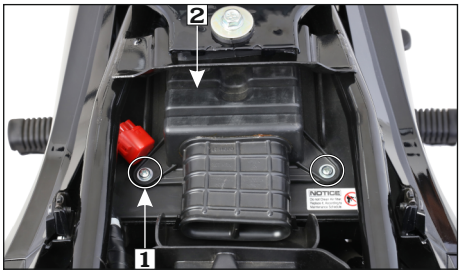


(1) Air cleaner cover screws **(2) Cover**

- Remove the air cleaner element (3).

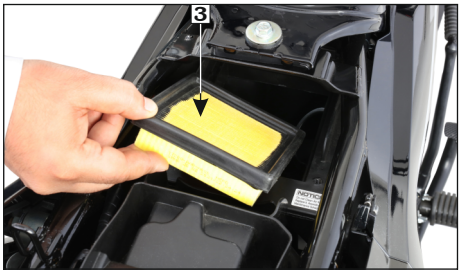

(3) Air cleaner element

! CAUTION

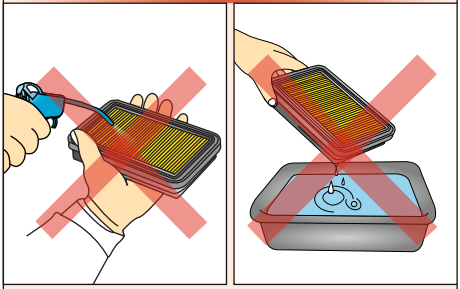

- ***Never wash or clean the wet, paper pleated type filter. Replace filter element once in every 15000 km.***
- ***Replace it earlier if it becomes very dirty, damage on surface or on the sealing area.***

NOTE


Align the tabs of air cleaner cover before installing screws & the cover.

- Clean the air cleaner housing using a shop towel.
- Install the new air cleaner element.
- Install the air cleaner element cover.
- Install the seat **(page 30)**.

Air cleaner drain tube plug cleaning

Remove the drain tube (1) and drain the deposit into a container.

Follow the above process more frequently when riding in rain or at full throttle.

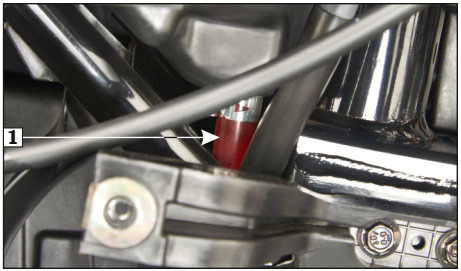

(1) Drain tube


Carburetor (Idle speed adjustment)

The carburetor is factory preset in order to achieve optimum performance and meet emission standards.

However in case of specific requirement of tuning due to engine stalling in idle speed, please follow the instructions given here under:

- Warm up the engine to normal operating temperature (60±5°C) and park the vehicle on the main stand.
- Adjust idle speed with the throttle stop screw (1).

IDLE SPEED: 1400 ± 100 r/min

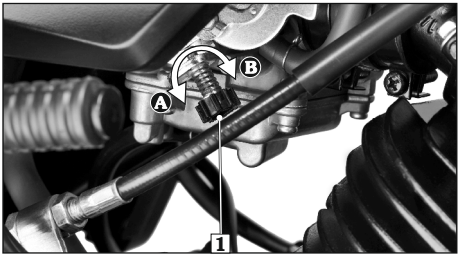


(1) Throttle stop screw
(A) Decrease rpm **(B) Increase rpm**

NOTE

Always adjust the idle speed in i3s switch "OFF" position.

! CAUTION

Never adjust pilot screw (2). Pilot screw adjustment is to be done only by Authorised Distributor/Dealer.

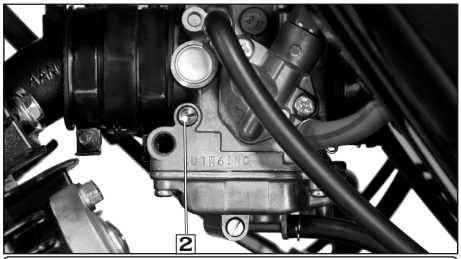

(2) Pilot screw

If pilot screw is tampered it affects the overall performance characteristics of the vehicle.


VALVE CLEARANCE ADJUSTMENT

Excessive valve clearance will cause noise, and little or no clearance will prevent the valve from closing and cause valve damage and power loss. Check valve clearance at the specified intervals **(page 39).**

NOTE


The checking or adjusting of valve clearance should be performed while the engine is cold. The clearance will change as the engine temperature rises.

- Remove the fuel tank.
- Remove the cylinder head left side cover (1) with its gasket (2) by removing bolts (3).

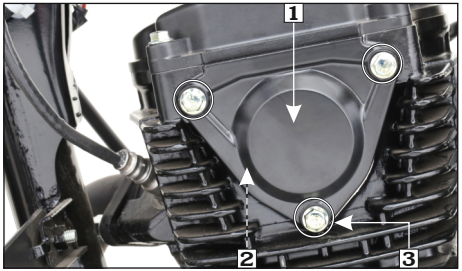


(1) Cylinder head left side cover
(2) Cylinder head left side cover gasket
(3) Cylinder head left side cover bolts

- Remove the engine breather pipe (4) by removing the clip (5).
- Remove the cylinder head cover (6) with its gasket (7) by removing the cylinder head cover bolts (8).

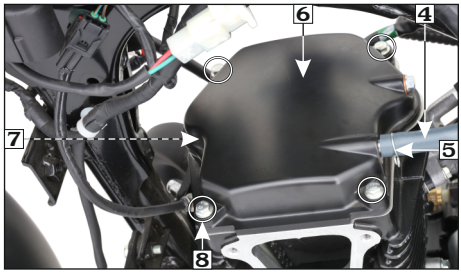


(4) Engine breather pipe (5) Clip
(6) Cylinder head cover (7) Gasket (8) Bolts

- Remove the timing hole cap with O-ring (9). Rotate the cam sprocket (12) clockwise using the special tool (13) until the 'T' mark (10) on the flywheel coincides with the index mark (11) on the left crankcase cover. In this position, the piston will either be on the compression or exhaust stroke.

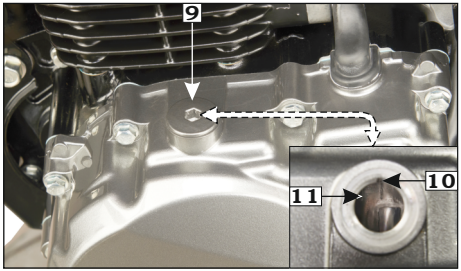

(9) Timing hole cap **(10) 'T' mark**
(11) Index mark

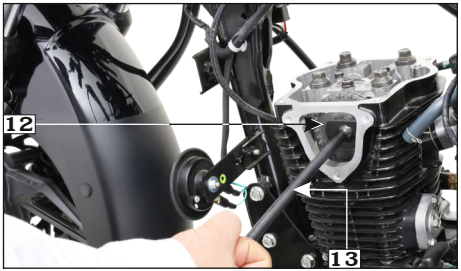

(12) Cam sprocket **(13) Special tool**

The adjustment must be made when the piston is at top dead center and both the inlet and exhaust valves are closed.

This condition can be determined by moving the rocker arms. If they are free, it is an indication that the valves are closed and the piston is in compression stroke. If they are tight, the valves are open, rotate the cam sprocket 360° clockwise and realign the 'T' mark with the index mark.

- Check the clearance by inserting the feeler gauge (14) between the adjusting screw (15) and valve stem (16).


Standard clearance (cold condition)

Intake : 0.08 mm

Exhaust : 0.12 mm

NOTE

Before inserting the feeler gauge, smear a bit of engine oil on the feeler gauge to avoid damage to the feeler gauge.

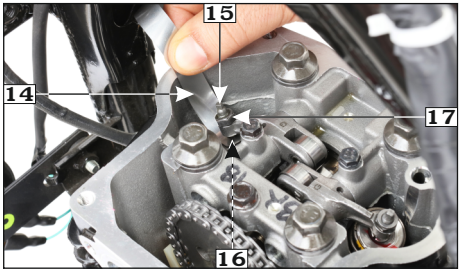

(14) Feeler gauge **(15) Adjusting screw**
(16) Valve stem **(17) Lock nut**

- Adjust by loosening the lock nut (17) and turning the adjusting screw until there is a slight drag on the feeler gauge.
- After tightening the lock nut, check again the clearance.

• Install all parts in the reverse order of disassembly.

NOTE


All O-rings and gaskets to be replaced with new ones.

CLUTCH LEVER FREE PLAY

Adjustment


Clutch adjustment may be required if the vehicle stalls when shifting into gear or tends to creep or if the clutch slips, causing acceleration to lag behind engine speed.

Normal clutch lever free play (1) is 10-20 mm at the lever (2).

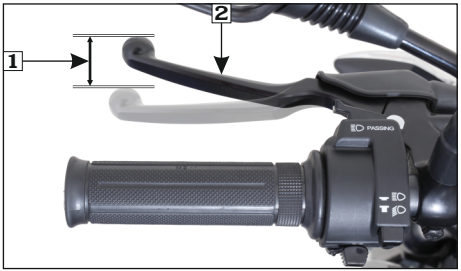

(1) Free play: 10-20 mm (2) Clutch lever

• To adjust the free play, loosen the lock nut (3). Turn the adjusting nut (4) to obtain the specified free play. Tighten the lock nut and check the adjustment.

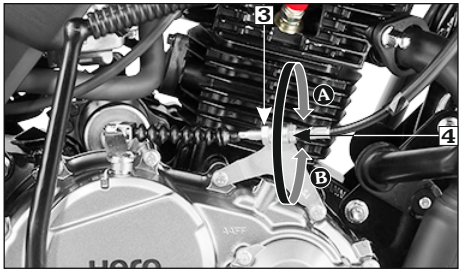

(3) Lock nut (4) Clutch cable adjusting nut
(A) Decrease free play (B) Increase free play

• Start the engine, press the clutch lever and shift into gear. Make sure the engine does not stall, and vehicle does not creep. Gradually release the clutch lever and open the throttle. The vehicle should start smoothly and accelerate.

Other checks

• Check the clutch cable for kinks or signs of wear that could cause sticking or failure.
• Check for clutch cable model. Use genuine clutch cables.
• Check for clutch cable routing.


NOTE

***If proper adjustment cannot be obtained or the clutch does not work correctly, visit your* Authorised Distributor/Dealer.**

THROTTLE OPERATION

Cable inspection


Check for smooth rotation of the throttle grip from the fully open to the fully closed position. Check at full left and full right steering positions. Inspect the condition of the throttle cable from the throttle grip down to the throttle body. If the cable is kinked, chafed or improperly routed, it should be replaced or rerouted. Standard throttle grip free play (1) is approximately 2-6 mm of grip rotation.

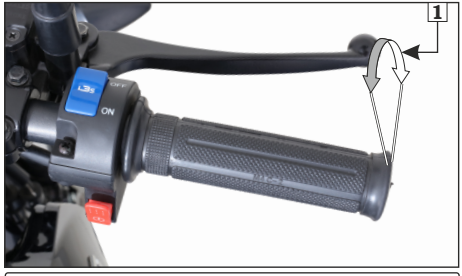

(1) Free play: 2-6 mm

Free play adjustment


Slide the boot (2), loosen the lock nut (3) and turn the adjuster (4).

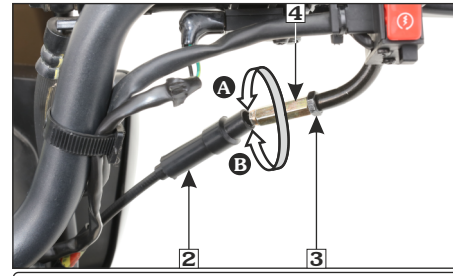

(2) Boot (3) Lock nut (4) Adjuster
(A) Decrease free play (B) Increase free play

BYSTARTER OPERATION

To apply bystarter, pull the knob (1) outwards, towards the rider to check for smooth operation. After checking the operation, push it back to OFF position (as shown in the picture).

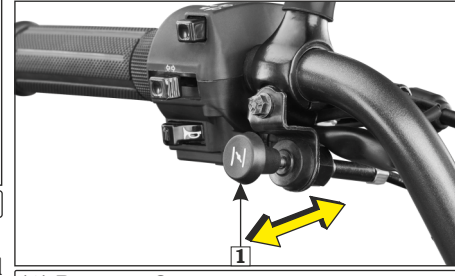

(1) Bystarter Operation

NOTE

Do not accelerate during starting when the bystarter is "ON".

DRIVE CHAIN SLACKNESS


The service life of the drive chain depends upon proper lubrication and adjustment.

Poor maintenance can cause premature wear or damage to the drive chain and sprockets.

The drive chain (1) should be checked and lubricated as part of the pre-ride inspection **(page 32).** Under severe usage, or when the vehicle is ridden in unusually dusty areas. more frequent maintenance will be necessary.

Inspection

- Turn the engine "OFF", park the vehicle on its main stand and shift the transmission to neutral. Remove hole cap (2).
- Drive chain slack (3) should be adjusted to allow approximately 30 mm vertical movement by hand.

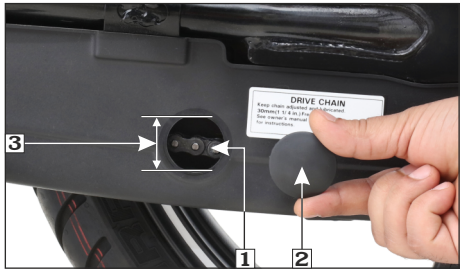


(1) Drive chain **(2) Hole cap**
(3) Drive chain slack: 30 mm


Rotate the wheel and check drive chain slack as the wheel rotates. Drive chain slack should remain constant as the wheel rotates.


If the chain is slack in one section and tight in another, some links are kinked and binding. Binding can be eliminated by frequent lubrication.

- Turn the chain to view chain lock plate (4) inside the hole. Ensure that the chain lock plate open end (5) is installed in the opposite direction of the chain rotation.
- Inspect the sprocket teeth for wear or damage.
- If the drive chain or sprockets are excessively worn or damaged, they should be replaced. Never use a new chain with worn out sprockets since this will result in rapid chain wear.

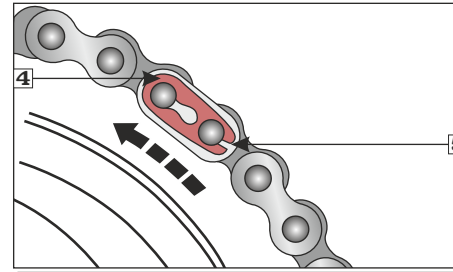

(4) Chain lock plate **(5) Open end**

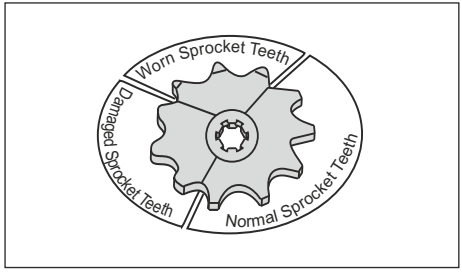


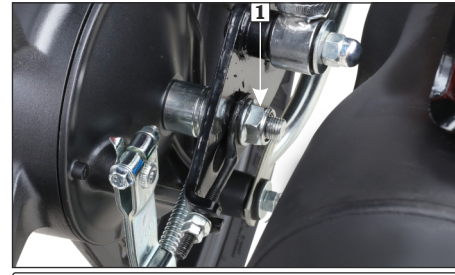

(1) Rear axle nut

Adjustment

- Park the vehicle on its main stand with the transmission in neutral and the ignition switch in "OFF" (⊗) position.
- Loosen the rear axle nut (1) and sleeve nut (2). Loosen both the drive chain lock nuts (3).
- Turn both the adjusting nuts (4) in an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting nut clockwise to decrease the slack or anticlockwise to increase the slack of the chain.
- Align the chain adjuster index mark (5) with the corresponding scale graduations (6) on both the sides of the swing arm equally.

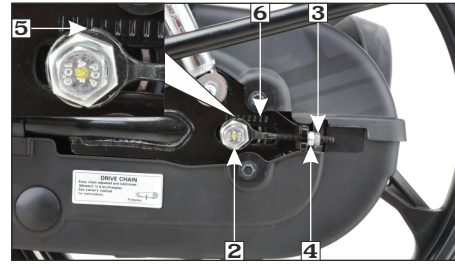

(2) Sleeve nut (3) Drive chain lock nut
(4) Drive chain adjusting nut (5) Index mark
(6) Scale graduation

- If the drive chain slack is excessive when the rear axle is moved to the farthest limit of adjustment, the drive chain is worn and must be replaced. Tighten the rear axle nut and sleeve nut.
  - **Rear axle nut torque: 5.2 kgf-m**
  - **Sleeve nut torque: 4.2 kgf-m**
- Check the drive chain slack again.
- Rear brake pedal free play and stop lamp switch free play are affected when repositioning the rear wheel to adjust drive chain slack. Check rear brake pedal free play and adjust as necessary **(page 57)**.

Lubrication

- Turn the engine "OFF", park the vehicle on its main stand and shift the transmission into neutral.
- Lubricate the drive chain by applying liberal amount of SAE#90 oil.

! CAUTION

Regular adjustment and lubrication as per the maintenance schedule would ensure high performance and longer life.


NOTE

Visit* Authorised Distributor/Dealer *for inspection, cleaning, lubrication and adjustment of drive chain at every 2000 km.

DRIVE CHAIN SLIDER INSPECTION

(Refer to "Maintenance Schedule" on **(page 39)**.

Check the drive chain slider (1) for wear, the chain slider must be replaced if it is worn to the bottom of the cutout or wear limit (2) is reached. For replacement, visit your Authorised Distributor/Dealer.

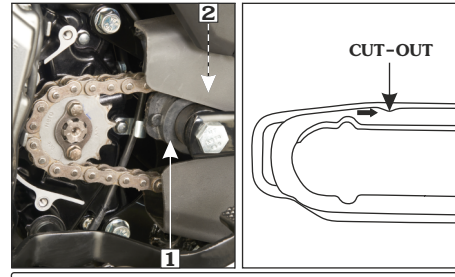

(1) Drive chain slider **(2) Wear limit**

BRAKES

Brakes (Integrated braking system)

Brakes are items of personal safety and should always be maintained with proper adjustments. When one applies the Integrated/Rear brake pedal, front & rear brakes activate jointly.

(a) Front brake inspection (Disc variant)


Master Cylinder/Reservoir.

Location: Right handlebar.


Brake fluid recommended: DoT 3 or DoT 4

Fluid level-Ensure that the brake fluid level

does not fall below “MIN” mark (1) on the master cylinder, when checked with the master cylinder parallel to the ground. The level decreases gradually due to piston movement to compensate pad wear. If the level decreases abruptly, check for leakage in the brake system and contact your Authorised Distributor/Dealer.

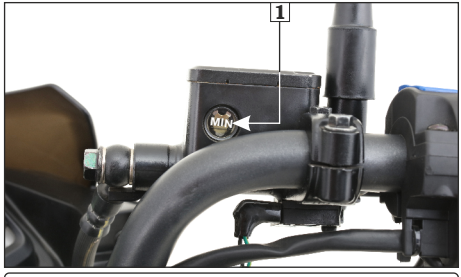

(1) "MIN" mark

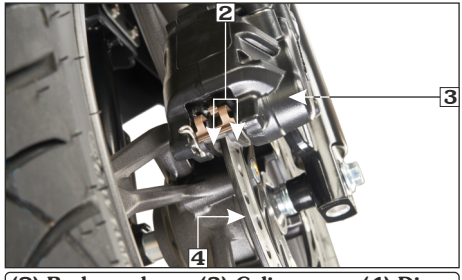

(2) Brake pads (3) Caliper (4) Disc

NOTE

- ***Clean the dirt and mud accumulation between the brake pads (2), caliper (3) and the disc (4) by using a water jet.***
- ***Always contact your* Authorised Distributor /Dealer *for refilling of master cylinder when necessary. Do not mix DoT 3 and DoT 4 brake fluid.***

(b) Rear brake fluid (IBS variant)

Refer to the safety precautions on **(page 38).**


Reservoir (1)

Location : Near the right side pillion footrest.

Brake fluid recommended :

DoT-4/DoT-3.

Fluid level – Ensure that the brake fluid level does not fall below "MIN" mark (2) on the reservoir parallel to the ground. The level decreases gradually due to piston movement to compensate pad wear. If the level decreases abruptly, check for the leakages in the brake system and consult your Authorised Distributor/Dealer.

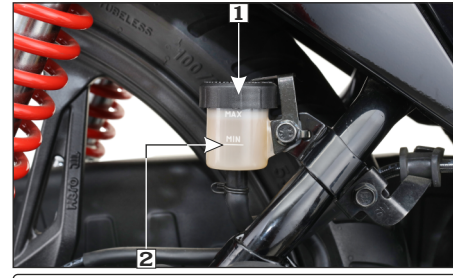


(1) Reservoir (2) "MIN" mark

(c) Brake pad wear (Disc variant)

Brake pad wear depends upon the severity of usage, the type of riding & road conditions. Generally, the pads will wear faster on wet & dirty roads. Inspect the pads at each regular maintenance interval.

Inspection

- Check the wear indicator grooves (1) on each pad.
- Check the brake pads for wear by examining the wear limit grooves on each pad.
- Replace the pads if worn out to the bottom of the groove.
- Always replace both the pads as a set.
- Visit your Authorised Distributor/Dealer for the brake pad replacement.

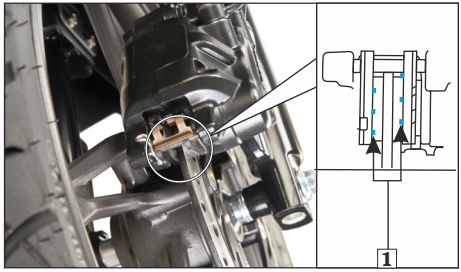

(1) Wear indicator groove


WARNING

Always apply front and rear brakes simultaneously to avoid skidding of vehicle.


(d) Rear brake inspection adjustment (Non IBS variant)

- Park the vehicle on its main stand.
- Measure the brake pedal (1) free play before the brake starts to take hold.
  Free play (2) should be 20-30 mm.
- If adjustment is necessary, turn the rear brake adjusting nut (3).
- Make sure that the cut-out on the adjusting nut is seated on the brake joint pin (4) after the final adjustment has been made.
- Apply the brake several times and check for free wheel rotation when released.


CW- Clockwise, ACW- Anticlockwise

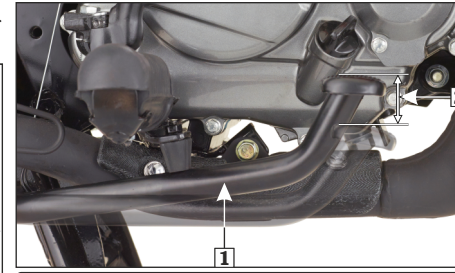

(1) Rear brake pedal
(2) Free play: 20-30 mm

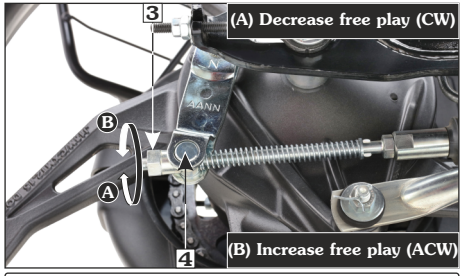

(3) Adjusting nut (4) Brake joint pin

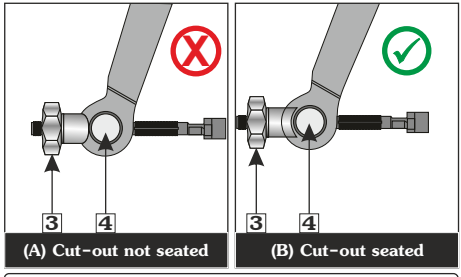

(3) Adjusting nut (4) Brake joint pin


NOTE

If proper adjustment cannot be obtained by this method, visit your **Authorised Distributor/Dealer.**

(e) Brake wear indicators

When the brake is applied, an arrow (1), fixed to the brake arm (2), moves towards a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

Rear brake wear indication

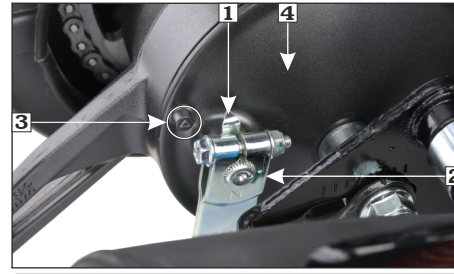

(1) Arrow (2) Brake arm
(3) Reference mark (4) Brake panel

SUSPENSION

Front and rear suspension inspection

- Check the front forks by locking the front brake and pumping the front fork up and down vigorously. The suspension action should be smooth and there should be no oil leakage.




- Check the rear shock absorber by pushing hard downwards on rear grip while the vehicle is not parked on stand. The suspension action should be smooth and there should be no oil leakage.

Rear shock absorber adjustment

Rear shock absorber adjustment can be made in any position from 1st to 5th according to the load/road conditions or owner's requirement.

Recommend adjustment

- Solo rider: 2nd position
- Rider + Pillion: 5th position

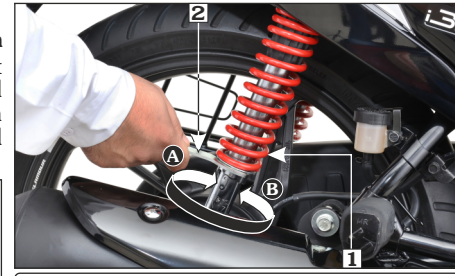

(1) Rear shock absorber **(2) Pin spanner**
(A) Stiffer **(B) Softer**

- In direction A: Stiffer
- In direction B: Softer

NOTE


Always adjust both the rear shock absorbers to the same position. To adjust the rear shock absorber (1), use the rear shock absorber adjustment tool (Pin spanner) (2) available in the tool kit.

WHEEL

(a) Front wheel (Disc variant)

Removal

- Support the vehicle securely on the main stand and raise the front wheel off the ground.
- Remove the front axle nut (1).
- Remove the axle (2) and the wheel (3).
- Remove the left & right side collars (4) from the wheel.

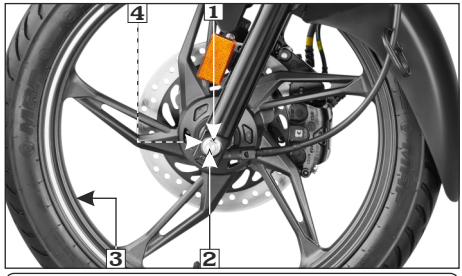

(1) Axle nut (2) Axle (3) Wheel
(4) Left & right side collars


! CAUTION

Do not operate front brake lever when the wheel is removed.

Installation

- Install the left & right side collars (1) to both sides of the wheel hub.
- Position the front wheel between the fork legs and align the disc between the brake pads to avoid damage to the pads. Insert the axle from the right side through the fork legs and wheel hub.
- Tighten the front axle nut to the specified torque.

TORQUE : 5.2 kgf-m

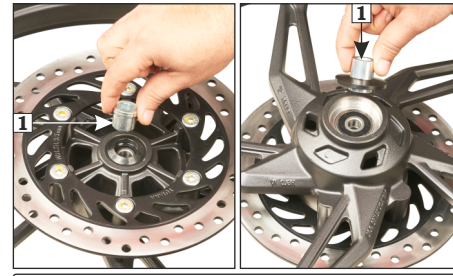


(1) Side collars

- After installing the wheel apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

(b) Rear wheel


Removal

- Support the vehicle securely on the main stand and raise the rear wheel off the ground.
- Remove the hugger fender.
- Remove the rear brake adjusting nut (1) and disconnect the brake rod (2) from the brake arm (3) by pushing down the brake pedal. Disconnect the brake stopper arm (4) from the brake panel (5) by removing split pin (6), lock nut (7) and washer (8).

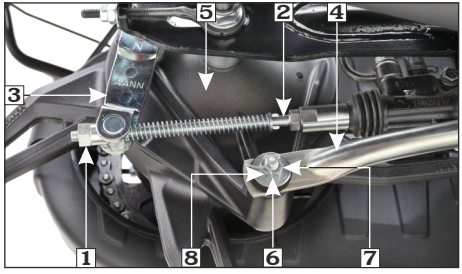

(1) Rear brake adjusting nut (2) Brake rod
(3) Brake arm (4) Brake stopper arm
(5) Brake panel (6) Split pin (7) Lock nut
(8) Washer

- Remove the rear axle nut (9).
- Pull out the axle (10) and collar (11).
- Remove the wheel.

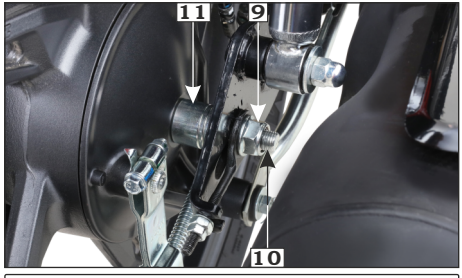

(9) Axle nut (10) Axle (11) Collar

Installation

- Reverse the removal procedure.

Axle nut torque: 5.2 kgf-m

Brake stopper arm nut torque: 2.2 kgf-m


- Adjust the rear brake free play **(page 57)** and drive chain slackness **(page 53)**.
- After installing the wheel, apply the brake several times and check for free wheel rotation when released.

! CAUTION

Always replace used split pins with new ones.

MAIN/SIDE STAND LUBRICATION

- Park the vehicle on the level surface.
- Check the main/side stand return spring for damage or loss of tension.
- Check the main stand (1)/side stand (2) for freedom of movement.
- Clean and lubricate the side stand pivot bolt (3) and rear brake pedal/main stand pivot (4).
- Make sure the side/main stand is not bent.

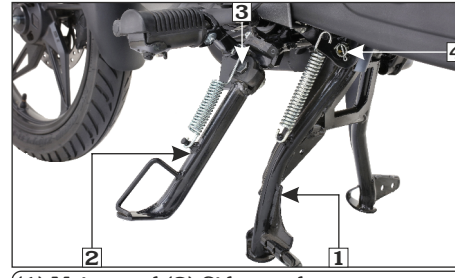

(1) Main stand (2) Side stand
(3) Side stand pivot bolt
(4) Rear brake pedal/Main stand pivot

TUBELESS TYRES

The tyres fitted on your vehicle are of TUBELESS type.

To safely operate your vehicle, your tyres must be of the proper type and size, in good condition with adequate tread, and correctly inflated for the load you are carrying.

The following pages give more detailed information on how and when to check the air pressure, how to inspect your tyres for damage, and what to do when your tyres need to be repaired or replaced.

Front	80/100-18″ (Tubeless tyre)
Rear	100/80-18″ (Tubeless tyre)

⚠ WARNING

- ***Using tyres that are excessively worn or improperly inflated can cause a crash in which you can be seriously hurt or killed.***
- ***Follow all instructions in this owner's manual regarding tyres inflation and maintenance.***

Air pressure

Keeping your tyres properly inflated provides the best combination of handling, tread life and riding comfort.

Generally, under-inflated tyres wear unevenly, adversely affect handling and are more likely to fail from being overheated.

Under inflated tyres can also cause wheel damage in rocky terrain.

Over-inflated tyres make your vehicle ride harshly, are more prone to damage from road hazards, and wear unevenly.

We recommend that you visually check your tyres before every ride and use a gauge to measure air pressure at least once a month or any time you think the tyres pressure might be low. Tubeless tyres have some self-sealing ability if they are punctured. However, because leakage is often very slow, you should look closely for punctures whenever a tyre is not fully inflated.

Always check air pressure when your tyres are ″cold″-when the vehicle has been parked for at least three hours. If you check air pressure when your tyres are ″warm″-when the vehicle has been ridden for even a few km-the readings will be higher than if the tyres were ″cold″. This is normal, so do not let air out of the tyres to match the recommended cold air pressures given below. If you do, the tyres will be under-inflated.

The recommended “cold” tyre pressures are:

	Rider only	Rider and Pillion
Front	1.75 kgf/cm^2 (25 psi)	1.75 kgf/cm^2 (25 psi)
Rear	2.00 kgf/cm^2 (29 psi)	2.30 kgf/cm^2 (33 psi)

! CAUTION

Over inflation/Under inflation will affect the performance.




(1) Air pressure gauge

Inspection


Whenever you check the tyre pressure, you should also examine tyre treads & side walls for wear, damage & foreign objects.

Look for:

- Bumps or bulges in the side of the tyre or the tread. Replace the tyre if you find any bumps or bulges.
- Cuts, splits or cracks in the tyre. Replace the tyre if you can see fabric or cord.

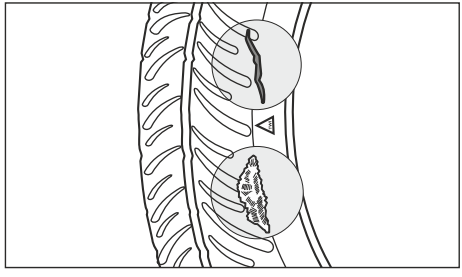

- Excessive tread wear.

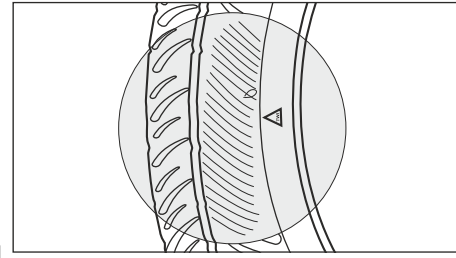

- Carefully inspect the tyres for any damage, if the vehicle hits a pothole or hard object.


Tread wear

Replace tyres immediately when the tread wear indicator **(1)** appears on the tyre. The tread limits are:

MINIMUM TREAD DEPTH:

Front: 1.0 mm **Rear:** 1.0 mm

Check the tread wear indicator for tyre wear.

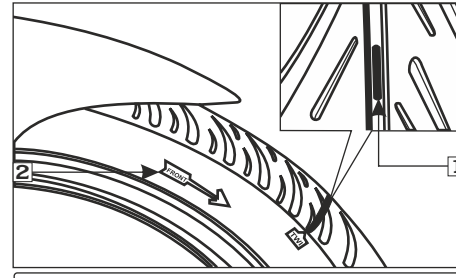

(1) Tread wear indicator (2) Arrow mark

Unidirectional tyres

Whenever the tyre is removed and put back in case of puncture, ensure the arrow mark (2) on the tyre is in the same direction as that of forward rotation of wheel.

Tyre repair

Repairing a puncture or removing a wheel requires special tools and technical expertise. If a tyre is punctured or damaged, it is advised to visit nearest tyre manufacture, Authorised Distributor/Dealer or the tyre repair shop who has expertise in repairing methods of tubeless tyre.

A tyre that is repaired either temporarily or permanently, will have lower speed and performance limits than a new tyre. After an emergency repair, always have the tyre inspected/replaced at our authorised dealer and replace the tyre if suggested.

You should not exceed 70 km/hour for the 1st 24 hours or 105 km/hour at any time thereafter. In addition, you may not be able to safely carry as much load as with a new tyre.

If you decide to have a tyre replace be sure the wheel is balanced before you ride.

Tyre replacement

The tyres that were installed on your vehicle were designed to match the performance capabilities of your vehicle and provide the best combination of handling, braking, durability and comfort.

⚠ WARNING

- ***Operation with excessively worn tyres is hazardous and will adversely affect traction and handling.***
- ***Under-inflation may result in the tyre slipping on or tyre coming off the rim.***
- ***Always use the size and type of tyres recommended in this owner's manual.***

NOTE

***For repair and replacement of tyre it is advised to visit your* Authorised Distributor/Dealer.**

Important safety reminders

- Do not install a tube inside a tubeless tyre on this vehicle. Excessive heat buildup can cause the tube to burst.
- Use only tubeless tyres on this vehicle. The rims are designed for tubeless tyres, and during hard acceleration or braking, a tube-type tyre could slip on the rim and cause the tyre to rapidly deflate.

NUTS, BOLTS & FASTENERS

- Tighten bolts and nuts at regular interval shown in the maintenance schedule.
- Check that all chassis nuts and bolts are tightened to correct torque values.
- Check that all cotter pins, safety clips, hose clamps and cable stays are in place.



BATTERY

Refer to the safety precautions on **(page 38).**

Location

The battery is located behind the left side cover.

Specification

***MF Battery, 12V-4Ah/ETZ5**

It is not necessary to check the battery electrolyte level or add distilled water as the battery is a **Maintenance Free (sealed)** type. If your battery seems weak and electrolyte is leaking (causing hard starting or other electrical troubles), contact your Authorised Distributor/Dealer.

***MF stands for Maintenance Free**

NOTE

This symbol on the battery means that this product must not be treated as household waste.

This symbol on the battery means the old battery must be returned to your Authorised Distributor/Dealer as it must be treated as recyclable material.

- ***Battery is a Maintenance-Free (sealed) type and can be permanently damaged if the sealing strip is removed.***
- ***An improperly disposed battery can be harmful to the environment and human health. Always confirm local regulations for battery disposal.***

Battery charging

Always visit your Authorised Distributor /Dealer if you see any symptom of battery discharge as earliest as possible to get the battery charged. The battery has a tendency to discharge rapidly if optional electrical accessories are fitted on the vehicle.


Battery storage

- If in case your vehicle is not used for more than a month remove the battery, fully charge and store in a cool and dry place.
- If the battery is expected to be stored for more then two months, ensure to fully charge the battery once in a month.
- Always ensure the battery is fully charged before installation.

- Ensure the battery leads are properly connected to the battery terminals during installation.


Battery removal

- Make sure the ignition switch is "OFF" (⊗).
- Remove the seat **(pages 30)**.
- Remove the left side cover screws (1) and remove the side cover (2) by releasing the tabs from the slots (3) and lugs from the grommets (4).

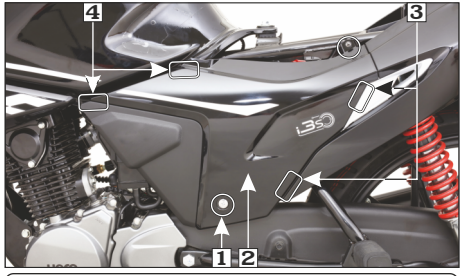

(1) Left side cover screws **(2) Side cover**
(3) Tab/slot **(4) Lugs/grommets**

- Remove the battery clamp bolt (5) and the battery clamp (6).
- Disconnect the negative (–)ve terminal lead (7) from the battery first, then disconnect the positive (+)ve terminal lead (8).
- Pullout the battery (9) from the battery box.

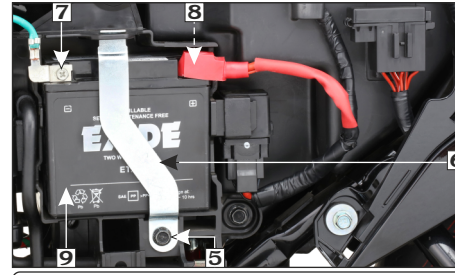

(5) Battery clamp bolt **(6) Battery clamp**
(7) (–)ve terminal **(8) (+)ve terminal**
(9) Battery

Battery installation

- Reinstall in the reverse order of removal. Be sure to connect the positive (+)ve terminal first, then the negative (–)ve terminal.
- Check all fasteners are secured properly.


FUSE REPLACEMENT

Fuse box (1)**:** Location: Mounted on the air cleaner assembly (2) left hand side.

Fuse: 20A, 15A, 10A

⚠ WARNING

- ***Never use a fuse with a different rating from that specified. It may lead to serious damage to the electrical system or a fire due to short circuit.***
- ***Battery gives off explosive gases. Keep sparks, flames & cigarettes away.***

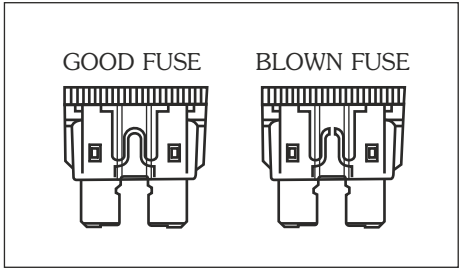


! CAUTION

- ***Do not attempt to start or ride the vehicle without a charged battery, it can cause fusing of the bulbs and permanent damage to certain electrical components.***
- ***Turn the ignition switch "OFF" before checking or replacing the fuse to prevent accidental short-circuiting.***

STOP LAMP SWITCH

The stop lamp switch (1) must be adjusted so that stop lamp will glow when rear brake is applied. Rear brake free play **(page 57)** should be adjusted before performing stop lamp switch adjustment. The procedure for adjusting stop lamp switch is as follows:

- Turn the ignition switch to the "ON" (○) position.

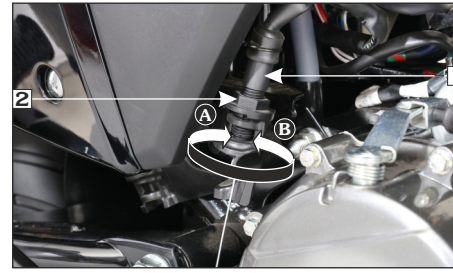


(1) Stop lamp switch **(2) Adjusting nut**
(A) Advance **(B) Retard**

- Turn the adjusting nut (2) to position stop lamp switch at a point where the stop lamp will glow just before the brake pedal is depressed to the limit of its free play. Turn the adjusting nut in direction (A) to advance switch timing or in direction (B) to retard switch timing.

HEADLAMP FOCUS ADJUSTMENT

Headlamp is factory preset. However in case of adjustment required, please follow the steps as given below:

- Headlamp adjustment is done by the headlamp adjusting bolt (1) located below headlamp.
- Park the vehicle on level ground.
- Turn the ignition switch to "ON" (Ω) position and start the engine.
- Adjust the headlamp beam vertically by loosening the bolt & move the headlamp unit forward & backward for correct focus adjustment.

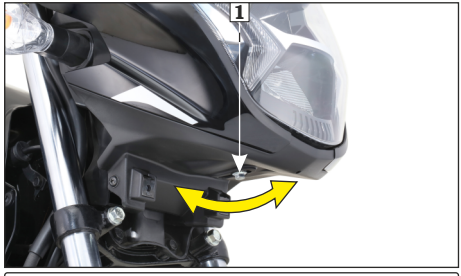

(1) Headlamp adjusting bolt

WARNING

An improperly adjust headlamp may blind oncoming rider/driver or it may fail to light the road for a safe distance.

CATALYTIC CONVERTER

This vehicle is equipped with the catalytic converter in the muffler to meet the emission norms.

The catalytic converter contains precious metals that serve as catalysts, promoting chemical reactions to convert the exhaust gasses without affecting the metals. The catalytic converter acts on HC, CO and NOx.

The catalytic converter must operate at a high temperature for the chemical reactions to take place. It can set on fire any combustible material that come near it. Park your vehicle away from high grasses, dry leaves, or other flammable material.

A defective catalytic converter contributes to air pollution and can impair your engine's performance.

Follow these guidelines to protect your vehicle's catalytic converter.

- Always use unleaded petrol. Even a small amount of leaded petrol can contaminate the catalyst metals, making the catalytic converter ineffective.
- Keep the engine in good running condition. A poorly running engine can cause the catalytic converter to overheat.
- If your engine is misfiring, backfiring, stalling, or otherwise not running properly, stop riding and turn "OFF" the engine. Have your vehicle serviced as soon as possible.



(1) Catalytic converter

POLISHING OF VEHICLE

After washing your vehicle, wax all painted surfaces (except matte painted surfaces) using a commercially available polish/quality liquid or paste wax to finish the job. Use only a non abrasive polish or wax made specifically for automobiles. Apply the polish or wax according to the instructions on the container.

NOTE

Polishing or waxing is not applicable for models having matte paint.

1. STARTING TROUBLE – ENGINE DOES NOT START

A. Fuel System

Check fuel valve position → "OFF" → Turn to "ON" position

↓ "ON" Position

Check fuel in Fuel Tank → No Fuel → Refill

↓ OK

Check fuel Lines → Leakage/Air Lock → Rectify

↓ OK

Consult Authorised Distributor/Dealer

B. Electric starter not working

Check fuse → Fused → Replace fuse **(page 66)**

↓ Ok

Inspect battery → Weak → **Consult Authorised Distributor/Dealer**

↓ Ok

Check connections, ignition switch/starter switch → Loose → Secure connections

↓ Ok

Consult Authorised Distributor/Dealer

C. No spark at spark plug

Check ignition switch → "OFF" → Turn ignition switch "ON"

↓ Ok

Check spark plug for fouling/ Improper electrode gap → No spark → Replace spark plug/adjust Spark plug gap **(0.8–0.9 mm)**

↓ Ok

Check for poorly connected Or loose spark plug wire → Loose contact → Secure properly

↓ Ok

Consult Authorised Distributor/Dealer

2. ENGINE STARTS BUT STALLS

Check Bystarter lever position → "ON" → Turn to "OFF" position
↓ "OFF" Position
Check Air Cleaner element → Dirty → Replace
↓ OK
Consult Authorised Distributor/Dealer


3. POOR PICK UP

Spark plug loose in cylinder head → Loose → Tighten the spark plug
↓ Ok
Check air cleaner element → Clogged → Replace
↓ Ok
Check brake binding → Improper adjustment → Readjust free play of rear brake pedal
↓ Ok
Check tyre inflation pressure → Under inflated → Correct tyre pressure
↓ Ok
Consult Authorised Distributor/Dealer

4. ELECTRICAL SYSTEM

Feeble horn sound or no light

Check fuse → Fused → Replace fuse **(page 66)**
↓ Ok
Inspect battery → Weak → **Consult Authorised Distributor/Dealer**
↓ Ok
Check bulbs → Fuse/wrong wattage → Replace bulbs
↓ Ok
Check connections → Loose → Secure connections
↓ Ok
Consult Authorised Distributor/Dealer

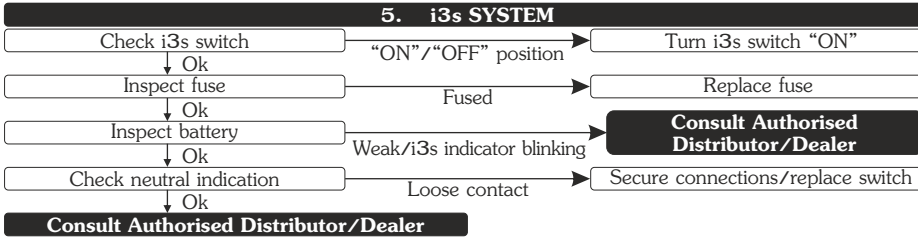
5. i3s SYSTEM
Check i3s switch
"ON"/"OFF" position
Turn i3s switch "ON"
Ok
Inspect fuse
Fused
Replace fuse
Ok
Inspect battery
Consult Authorised Distributor/Dealer
Weak/i3s indicator blinking
Ok
Check neutral indication
Loose contact
Secure connections/replace switch
Ok
Consult Authorised Distributor/Dealer

CUSTOMER'S COPY

IGNITOR 125 XTEC

HMCL Niloy Bangladesh Ltd.

DELIVERY CERTIFICATE

No.: IB11C

I certify having taken delivery of one HMCL Niloy Bangladesh Ltd. **IGNITOR FV XTEC** Vehicle bearing the following particulars:-

Engine No. _____

VIN _____

Colour/Model _____ **Key No.** _____

Allotment No. _____ **Date of Sale** _____

Customer's Name _____

I have been explained by the dealer about correct and safe driving habits, warranty terms and conditions, service schedules and maintenance tips and understood the same.

Customer's Copy



HMCL Niloy Bangladesh Ltd.

Alongwith the vehicle I have also received the following:-

1. Owner's Manual
2. 2 Nos. Keys
3. 1 Set of tools **(for details see below)**
4. Standard Accessories **(optional accessories is/are chargeable)**
5. Battery Make _____ Sr. No. _____
6. Tyre **Front** Make _____ Sr. No. _____
   Rear Make _____ Sr. No. _____

The vehicle has been delivered in factory fresh conditions to my satisfaction & I have understood all terms and conditions of warranty and shall abide by them.

Customer's Name _____

Customer's Address _____

Customer's Signature _____

Authorised Distributor/Dealer Name _____

Authorised Distributor/Dealer Address _____

Details of Tool kit

Tool bag- 1 No., +, -No. 2 Driver- 1 No., Grip- 1 No., Box wrench 16 x 14- 1 No., Pin spanner- 1 No.

AUTHORISED DISTRIBUTOR/DEALER COPY

IGNITOR 125 XTEC

HMCL Niloy Bangladesh Ltd.

DELIVERY CERTIFICATE

No.: IB11C

I certify having taken delivery of one HMCL Niloy Bangladesh Ltd. **IGNITOR FV XTEC** Vehicle bearing the following particulars:-

Engine No. _____

VIN _____

Colour/Model _____ **Key No.** _____

Allotment No. _____ **Date of Sale** _____

Customer's Name _____

I have been explained by the dealer about correct and safe driving habits, warranty terms and conditions, service schedules and maintenance tips and understood the same.

Authorised Distributor/Dealer copy



HMCL Niloy Bangladesh Ltd.

Alongwith the vehicle I have also received the following:-

1. Owner's Manual
2. 2 Nos. Keys
3. 1 Set of tools **(for details see below)**
4. Standard Accessories **(optional accessories is/are chargeable)**
5. Battery Make _____ Sr. No. _____
6. Tyre **Front** Make _____ Sr. No. _____
   Rear Make _____ Sr. No. _____

The vehicle has been delivered in factory fresh conditions to my satisfaction & I have understood all terms and conditions of warranty and shall abide by them.

Customer's Name _____

Customer's Address _____

Customer's Signature _____

Authorised Distributor/Dealer Name _____

Authorised Distributor/Dealer Address _____

Details of Tool kit

Tool bag- 1 No., +, -No. 2 Driver- 1 No., Grip- 1 No., Box wrench 16 x 14- 1 No., Pin spanner- 1 No.

GENUINE PARTS

WHAT ARE THE BENEFITS OF GENUINE SPARE PARTS ?

- Assures long life
- Ensures economy for a long time
- Safety of vehicle and rider
- Peace of mind
- Value for money
- Assured quality

CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Clutch plate	• Material used is inferior • Damages other parts of clutch like, clutch center and outer clutch • Affects fuel efficiency • Poor acceleration
Cam chain kit	• Poor performance • Reduced life
Gasket cylinder head	• Improper sealing • Engine knocking • Leads to leakage and smoky exhaust • Higher emission level

GENUINE PARTS

CONSEQUENTIAL DAMAGES ON USING NON-GENUINE PARTS

Element air cleaner	• Improper air filtration resulting in premature engine failure • Affects fuel efficiency • Poor engine performance
Spark plug	• Frequent stalling of engine • Higher emission level • Poor engine performance • Affects fuel efficiency
Brake pads/Shoes	• Poor braking efficiency • Rider safety-an issue • Discs/Drum wear out, resulting in subsequent repair cost
Chain sprocket kit	• Noisy operation • Failure of chain can cause fatal accident

JOBS APPLICABLE TO PERIODIC SERVICES

- Test drive the vehicle if required for reported troubles, if any.
- Wash the vehicle, blow dry with air at every service.
- Fuel line inspection at every service.
- Inspect bystarter operation at every service.
- Inspect throttle free play and operation at every service, adjust if necessary.
- Clean carburetor at first service then every 6000 km, adjust if necessary.
- Replace air cleaner element at every 15000 km.
- Inspect, clean the spark plug at every service, adjust if necessary. (replace at every 12000 km).
- Inspect the valve clearance at every service, adjust if necessary.
- Engine oil top up or change as per the maintenance schedule.
- Clean engine oil strainer screen at first service then every 6000 km.
- Inspect engine oil filter at every 6000 km, replace at every 12000 km.
- Inspect electric starter operation at every service.
- Inspect oil circulation at every service.
- Inspect, clean, lubricate and adjust the drive chain at every 2000 km.
- Inspect the drive chain slider.
- Inspect battery voltage at every service and charge if required.
- Inspect brake shoe wear at every service, adjust if necessary.
- Inspect brake pad and brake fluid level at every service.
- Clean and lubricate brake pedal at second service, then every 6000 km.
- Inspect all lamps, horn and switches at every service, adjust if necessary.
- Inspect headlamp focus at every service, adjust if necessary.
- Inspect clutch lever free play at every service, adjust if necessary.
- Clean and lubricate side stand pivot bolt and rear brake pedal/main stand pivot at every service.
- Inspect and clean the side stand switch at every service.
- Inspect fasteners and tighten to the specified torque (if required).
- Inspect the bearings free play, replace if necessary.
- Inspect wheels/tyres. Inflate tyre to specified pressure at every service.
- Inspect steering for smooth operation, adjust (if necessary) in every alternate service and lubricate at every 12000 km.
- Inspect front suspension at every service, replace oil once in every 2 year or 30000 km whichever is earlier.
- Inspect rear suspension mounting bushes play, replace if necessary.
- Test drive the vehicle for repair of problems reported.
- Polish entire vehicle.

SERVICE RECORD SHEET
To be Filled in by Supervisor

Free/Paid Service	Km. Range	Date	Km. Reading	Job Card No.	Authorised Distributor/Dealer (Sig. & Stamp)
I	500 – 750				
II	3000 – 3500				
III	6000 – 6500				
IV	9000 – 9500				
V	12000 – 12500				
VI	15000 – 15500				
VII	18000 – 18500				
VIII	21000 – 21500				
IX	24000 – 24500				
X	27000 – 27500				
XI	30000 – 30500				
XII	33000 – 33500				
XIII	36000 – 36500				
XIV	39000 – 39500				
XV	42000 – 42500				
XVI	45000 – 45500				
XVII	48000 – 48500				

NOTE

It is suggested to avail all free and paid services as per the recommended schedule for optimum performance of your vehicle. Vehicle malfunction due to unauthorized tempering of the vehicle will not be covered under the warranty policy. Please ensure that each paid service is availed within 90 days from the date of previous service or as per the recommended schedule, whichever is earlier.

SERVICE RECORD SHEET
To be Filled in by Supervisor

Free/Paid Service	Km Range	Date	Km Reading	Job Card No.	Authorised Distributor/Dealer (Sig. & Stamp)
XVIII	51000 – 51500				
XIX	54000 – 54500				
XX	57000 – 57500				
XXI	60000 – 60500				
XXII	63000 – 63500				
XXIII	66000 – 66500				
XXIV	69000 – 69500				
XXV	72000 – 72500				

REMARKS (IF ANY)

SERVICE ADVICE SHEET

Normal wear and tear components replacement advice

Date	Km Job Card No.	Advice	Authorised Distributor/Dealer (Sig. & Stamp)	Completion Dt. Job Card No.



HMCL Niloy Bangladesh Ltd.

OWNERSHIP RECORD AND DATA

NAME_____

ADDRESS_____

MODEL_____ **REGN. NO.** _____

ENGINE NO._____

VIN_____

DATE OF PURCHASE_____**KM. READING** _____

AUTHORISED DISTRIBUTOR/DEALER NAME_____

ADDRESS_____

_____

BATTERY MAKE_____ **SERIAL NO.**_____

AUTHORISED DISTRIBUTOR/DEALER
STAMP AND SIGNATURE